 



 


 



 



 

 
 
 
 

 
 
 

 




 

 




 

 



 




 
 
 
 

 
 

 

 



 


 





Original		Replacement		Original		Replacement	
	Power		Power		Prog+		Ch +
	Input		AV		Prog-		Ch -
	1		1		Media		Media
	2		2		Exit		Exit
	3		3		Tv/Radio		TV/R
	4		4		Digital/Analog		Eject
	5		5		OK		Ok
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		Sync Menu		Menu
	[≡]/Text		Text		Guide		Guide
	[+]		Format		?/i-Manual		D. Menu
	Mute		Mute		Home		Smart
	Vol+		Vol +		Options		Options
	Vol-		Vol -		Return/Back		Back





Original	Replacement	Original	Replacement
	[i+]		Info
	SEN		Pre Ch
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Rec		Rec
	Pause		Pause
	Stop		Stop
	Play		Play
	>>		>>
	<<		<<
	Title List		List
	Tv Pause		3D
	[...]		Subt
	Audio		Dual
	X/Related Search		Sleep

