











 







 


 
 


 
 



 

























 

 



 







Original		Replacement		Original		Replacement	
	Power		Power		8		8
	Mute		Mute / Dimmer		9		9
	[]/[+]		TV/Radio /		0		0
	Input		AV / Input / RDS		-/--		Guide / EPG / -/--
	[=]		Text / Goto		C		Fav / Marker / PC
	[X]/[o]		Zoom / Size		Red		Red / Netflix / Search
	[◆]		Picture / Format		Green		Green / APP / Repeat
	[?]/[i+]		Subtitle / EQ		Yellow		Yellow / YouTube / Repeat
	↔		Smart / List		Blue		Blue / Prime Video / Random
	[II]/[=i]		Display / Media		Menu		Menu / Home
	1		1		+		Up
	2		2		-		Down
	3		3		→←		OK
	4		4		+		Vol+
	5		5		-		Vol-
	6		6		Progr+		CH+ / Page+
	7		7		Progr-		CH- / Page-



