

 







 

 

 



 





 

 



 



 



 



 



 















 









Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep / Timer
	Phono		Red / Netflix / Search
	Video		Blue / Prime Video / Random
	Tape		Green / APP / Repeat
	Tuner		TV/Radio /
	CD		Yellow / YouTube / Repeat
	Volume+		Vol+
	Volume-		Vol-
	Disc Skip		Zoom / Size
	Play CD		Play / Slow
	Pause CD		Pause / Step / Freeze
	Stop CD		Stop / Hold
	I<< CD		I<< / Preset-
	>>I CD		>>I / Preset+
	1 Tuner		1
	2 Tuner		2
	3 Tuner		3
	4 Tuner		4
	5 Tuner		5
	6 Tuner		6
	7 Tuner		7
	8 Tuner		8
	9 Tuner		9
	10 Tuner		0
	Shift		Smart / List
	1 CD		Shift + 1
	2 CD		Shift + 2
	3 CD		Shift + 3
	4 CD		Shift + 4
	5 CD		Shift + 5
	6 CD		Shift + 6
	7 CD		Shift + 7
	8 CD		Shift + 8



