

 
 





 











 





 



| Original | Replacement |
|---|---|
|  On |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Go to Zero |  Back / Return |
|  TV / VTR |  AV / Input / RDS |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  Counter Reset |  Exit / Cancel / Clear |
|  Index |  Info / Angle |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Counter Display |  Smart / List |
|  Prog+ |  CH+ / Page+ |
|  0 |  0 |

| Original | Replacement |
|---|--|
|  1- |  Guide / EPG / -/- |
|  2- |  Fav / Marker / PC |
|  Timer Display |  Display / Media |
|  Prog- |  CH- / Page- |
|  1/10 |  Shift + 1 |
|  1/5 |  Shift + 2 |
|  X1 |  Shift + 3 |
|  X2 |  Shift + 4 |
|  X9 |  Shift + 5 |
|  Still |  Shift + Pause / Step / |
|  Frame rev |  I<< / Preset- |
|  Frame Fwd |  >>I / Preset+ |
|  Play |  Play / Slow |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  Stop |  Stop / Hold |
|  Rec |  Rec / Rec Mode |





| Original | | Replacement | | Original | | Replacement | |
|---|-------|---|-----------------------|----------|--|-------------|--|
|  | Pause |  | Pause / Step / Freeze | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

