



| Original  | Replacement  | Original   | Replacement  |
|---|--|--|--|
|  Power         |  Power                        |  Subtitle     |  Subtitle / EQ            |
|  Eject         |  Eject / Surround             |  Zoom/Size    |  Zoom / Size              |
|  Tv/Radio      |  TV/Radio /                   |  Aspect       |  Shift + Picture / Format |
|  Red/Goto      |  Red / Netflix / Search       |  Subpage      |  Shift + Subtitle / EQ    |
|  Red/Goto      |  Shift + Text /               |  Media        |  Shift + Display / Media  |
|  Green/Angle   |  Info / Angle                 |  Play         |  Play / Slow              |
|  Green/Angle   |  Green / APP / Repeat         |  Pause        |  Pause / Step / Freeze    |
|  Yellow/Repeat |  Shift + Green / APP /        |  <<           |  << / Tune-               |
|  Yellow/Repeat |  Yellow / YouTube / Repeat    |  >>           |  >> / Tune+               |
|  Blue/A-B      |  Shift + Blue / Prime         |  Rec          |  Rec / Rec Mode           |
|  Blue/A-B     |  Blue / Prime Video / Random |  D.Setup     |  Setup / OPT /           |
|  FAV         |  Fav / Marker / PC          |  Stop       |  Stop / Hold            |
|  Text        |  Text / Goto                |  I<<        |  I<< / Preset-          |
|  Freeze/Hold |  Shift + Stop /             |  >>I/Index  |  >>I / Preset+          |
|  Freeze/Hold |  Shift + Pause / Step /     |  >>I/Index  |  Smart / List           |
|  EPG         |  Guide / EPG / -/--         |  Menu       |  Menu / Home            |
|  D.Menu      |  D.Menu / Top               |  Lang/Audio |  Audio / Lang I/II      |





| Original | Replacement           |
|----------|-----------------------|
|          | Up                    |
|          | Left                  |
|          | OK                    |
|          | Right                 |
|          | Sleep / Timer         |
|          | Down                  |
|          | Shift + Sound / Title |
|          | Exit / Cancel / Clear |
|          | Vol+                  |
|          | Mute / Dimmer         |
|          | CH+ / Page+           |
|          | Vol-                  |
|          | Display / Media       |
|          | CH- / Page-           |
|          | 1                     |
|          | 2                     |
|          | 3                     |

| Original | Replacement                |
|----------|----------------------------|
|          | 4                          |
|          | 5                          |
|          | 6                          |
|          | 7                          |
|          | 8                          |
|          | 9                          |
|          | Shift + Guide / EPG / -/-- |
|          | 0                          |
|          | Back / Return              |
|          | AV / Input / RDS           |
|          | Picture / Format           |
|          | Sound / Title              |
|          |                            |
|          |                            |
|          |                            |
|          |                            |
|          |                            |
|          |                            |

