









Original	Replacement	Original	Replacement
 Power	 Power	 Yellow	 Yellow / YouTube / Repeat
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 Picture	 Picture / Format	 0	 0
 Sound	 Sound / Title	 Exit	 Exit / Cancel / Clear
 Still	 Pause / Step / Freeze	 Blue	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 Red	 Red / Netflix / Search	 Down	 Down
 4	 4	 CH -	 CH- / Page-
 5	 5	 CH +	 CH+ / Page+
 6	 6	 Vol -	 Vol-
 Green	 Green / APP / Repeat	 Vol +	 Vol+
 7	 7	 Guide / Size	 Guide / EPG / -/--
 8	 8	 Index / Subtitle	 Subtitle / EQ
 9	 9	 Sleep	 Sleep / Timer

Original	Replacement	Original	Replacement
 Power	 DIMMER MUTE	 SHIFT	 TV
 Source	 DVD	 SAT	 AUX
 Picture	 SLOW	 STEP - FREEZE	 HOLD
 Sound	 AUDIO	 SUBTITLE	 REC MODE
 Still	 PICTURE	 ZOOM	 SLEEP
 Mute	 TOP MENU	 OPT-TOOLS	 GOTO
 1	 D.MENU	 SETUP	 TEXT
 2	 HOME	 ANGLE	 INFO
 3	 MENU	 OK	 RETURN
 4	 EXIT	 CANCEL	 BACK
 5	 LIST	 SMART	 CH PAGE
 6	 VOL +	 MEDIA	 DISPLAY
 7	 TV	 DVD	 CD - STB
 8	 VIDEO	 TAPE	 TUNER
 9	 AUX - HDD	 USB	 BLUETOOTH
 Green	 GUIDE EPG	 HDMI - BAT	 PC
 Red	 NETFLIX	 APP	 YouTube
 Blue	 REPEAT	 REPEAT A-B	 RANDOM



