


Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Back
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Tv/Radio		TV/R
	Nicam		3D
	PC.A/Zoom		Shift + Eject
	Display		Info
	Sleep		Sleep
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	Play		Play

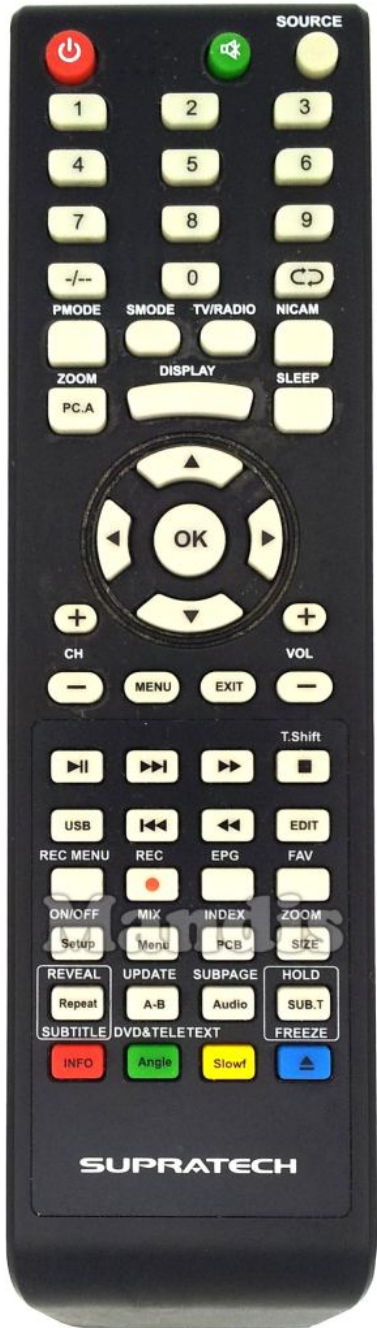



Original	Replacement
Pause	Pause
>>I	>>I
I<<	I<<
>>	>>
<<	<<
Open/Close	Eject
Stop/T.Shift	Stop
USB	Smart
Edit	Shift + Smart
Rec Menu	Shift + Rec
Rec	Rec
EPG	Shift + Guide
FAV	Pre Ch
Setup/On/Off	Options
Menu/Mix	D. Menu
PCB/Index	List
Size/Zoom	Format

Original	Replacement
Repeat/Reveal/Subtitle	Subt
A-B/Update/DVD&Teletext	Text
Sub.T/Hold/Freeze	Media
Audio/Subpage	Dual
Red/Info	Red
Green/Angle	Green
Yellow/Slowf	Yellow
Blue	Blue

