



 
















Original	Replacement	Original	Replacement
 Power	 Power	 Red / Info	 Red
 Mute	 Mute	 Red / Info	 Info
 1	 1	 V-PP	 Options
 2	 2	 Yellow / V-PP	 Yellow
 3	 3	 Zoom	 Eject
 4	 4	 A-PP	 Dual
 5	 5	 Up / P+	 Up
 6	 6	 Up / P+	 Ch +
 7	 7	 Menu	 Ok
 8	 8	 Down / P-	 Down
 9	 9	 Down / P-	 Ch -
 0	 0	 Right / V+	 Right
 -/--	 Guide	 Right / V+	 Vol +
 TV / AV	 AV	 Left / V-	 Left
 Green / Timer	 Green	 Left / V-	 Vol -
 Green / Timer	 Shift + AV	 Menu	 Menu
 Blue / QV	 Blue	 Reveal	 Smart

Original	Replacement	Original	Replacement
 Red / Info	 Red	 Red / Info	 Info
 V-PP	 Options	 Yellow / V-PP	 Yellow
 Zoom	 Eject	 A-PP	 Dual
 Up / P+	 Up	 Up / P+	 Ch +
 Up / P+	 Ch +	 Menu	 Ok
 Down / P-	 Down	 Down / P-	 Ch -
 Down / P-	 Ch -	 Right / V+	 Right
 Right / V+	 Vol +	 Right / V+	 Vol +
 Right / V+	 Vol +	 Left / V-	 Left
 Left / V-	 Vol -	Menu	Menu
Left / V-	Vol -	Reveal	Smart





Original		Replacement	
	Size		Format
	Mix	+	Shift + Text
	TV / TXT		Text
	Cancel		Back
	Subcode		Subt
	Index		Media
	Stop		Stop

Original		Replacement	

