




 
 


 





 
 


 


 
 
 









Original	Replacement	Original	Replacement
 Power	 Power	 Info	 Info
 Source	 AV	 Vol +	 Vol +
 1	 1	 Vol -	 Vol -
 2	 2	 Mute	 Mute
 3	 3	 CH +	 Ch +
 4	 4	 CH -	 Ch -
 5	 5	 Exit	 Exit
 6	 6	 Menu	 Menu
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 CH. List	 Smart	 OK	 Ok
 Back	 Back	 TV / Radio	 TV/R
 P.Mode	 Format	 FAV	 Pre Ch
 S.Mode	 Dual	 Text	 Text
 Sleep	 Sleep	 Audio	 Shift + Dual



