


 




 








 

 

 

 




 
 
 
 











 
 






 




 






Original		Replacement		Original		Replacement	
	Power		Power		4		4
	Mute		Mute		5		5
	Display	 + 	Shift + Info		6		6
	Sleep		Sleep		7		7
	Pic. Size		TV/R		8		8
	P. Mode	 + 	Shift + Format		9		9
	S.Mode		Dual		0		0
	Still		Pause		-/--	 + 	Shift + Guide
	PIP	 + 	Shift + 1		Return		Back
	P.Input	 + 	Shift + 2		CH +		Ch +
	P.Position	 + 	Shift + 3		CH -		Ch -
	P.Size		Format		Vol +		Vol +
	P.Swap	 + 	Shift + 5		Vol -		Vol -
	S.Input	 + 	Shift + 6		TV Menu		Menu
	1		1		DVB Menu	 + 	Shift + Menu
	2		2		Up		Up
	3		3		Left		Left





Original	Replacement	Original	Replacement
 Enter	 Ok	 DVB Source	 Media
 Right	 Right	 P.Scan	 >>
 Down	 Down	 Key Lock	 Rec
 AV / TV	 AV	 Surround	 3D
 Exit	 Exit	 Info	 Info
 Text	 Text	 FAV	 Pre Ch
 Hold	 Stop	 Nicam / A2	 Options
 Index	 Smart	 EPG	 Guide
 Cancel	 Shift + Exit	 Subtitle	 Subt
 Mix	 Shift + Text	 Audio	 Shift + Dual
 Size	 Eject		
 Sub Page	 Shift + Subt		
 Reveal	 Shift + Ok		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Cyan	 Blue		

