



| Original | Replacement |
|----------|-------------------|
| Power | Power |
| Mute | Mute / Dimmer |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| Info | Info / Angle |
| FAV | Fav / Marker / PC |
| Page+ | Shift + CH+ / |
| Page- | Shift + CH- / |
| Audio | Audio / Lang I/II |

| Original | Replacement |
|------------|-----------------------|
| Digest | Setup / OPT / |
| Menu | Menu / Home |
| EPG | Guide / EPG / -/- |
| Exit | Exit / Cancel / Clear |
| Play | Play / Slow |
| Zoom | Zoom / Size |
| Pause | Pause / Step / Freeze |
| << / Tune- | << / Tune- |
| >> / Tune+ | >> / Tune+ |
| Rec | Rec / Rec Mode |
| Stop | Stop / Hold |
| UP | Up |
| DOWN | Down |
| RIGHT | Right |
| LEFT | Left |
| OK | OK |
| CH+ | CH+ / Page+ |



