








 
 
 


 

 

 

 

 







 
 
 
 
 
 


Original	Replacement
Source	Shift + AV / Input / RDS
Power	Power
List	Smart / List
TV	Shift + 1
DVD	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
AV	AV / Input / RDS
0/--	Shift + Guide / EPG / -/--
FAV	Fav / Marker / PC





 

 
 
 



 





 





 

 



 

 

Original	Replacement
Exit	Exit / Cancel / Clear
Menu	Menu / Home
Up	Up
Left/Zoom-	Left
OK	OK
Right/Zoom+	Right
Down	Down
Guide	Guide / EPG / -/--
Return	Back / Return
Info	Info / Angle
Vol+	Vol+
Presets	Setup / OPT /
PR+	CH+ / Page+
Vol-	Vol-
PR-	CH- / Page-
Mute	Mute / Dimmer
Red/O Lang	Red / Netflix / Search







Original	Replacement
 Power	 Power
 List	 Smart / List
 TV	 Shift + 1
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0/--	 Shift + Guide / EPG / -/--
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home

Original	Replacement
 Up	 Up
 Left/Zoom-	 Left
 OK	 OK
 Right/Zoom+	 Right
 Down	 Down
 Guide	 Guide / EPG / -/--
 Return	 Back / Return
 Info	 Info / Angle
 Vol+ Tv	 Vol+
 Presets	 Setup / OPT /
 PR+	 CH+ / Page+
 Vol- Tv	 Vol-
 PR-	 CH- / Page-
 Mute Tv	 Mute / Dimmer
 Red/O Lang	 Audio / Lang I/II
 Red/O Lang	 Red / Netflix / Search
 Subtitles	 Subtitle / EQ







Original	Replacement
Source / Eject	Eject / Surround
Power	Power
List	Smart / List
TV	Shift + 1
DVD	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
AV	AV / Input / RDS
0 / --	Shift + Guide / EPG / --
FAV	Fav / Marker / PC

Original	Replacement
Exit	Exit / Cancel / Clear
Menu	Menu / Home
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Guide	Guide / EPG / --
Return	Back / Return
Info	Info / Angle
Vol +	Vol+
PR +	CH+ / Page+
Vol -	Vol-
PR -	CH- / Page-
Mute	Mute / Dimmer
Red / A-B	Shift + Yellow / YouTube /
Red / A-B	Red / Netflix / Search



