



Original	Replacement
Power	Power
Source	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV	TV/Radio /
0	0
Recall	Fav / Marker / PC
V+	Vol+
Mute	Mute / Dimmer
P+	CH+ / Page+

Original	Replacement
V-	Vol-
World/Internet	Smart / List
P-	CH- / Page-
Menu	Menu / Home
Q.Menu	D.Menu / Top
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Back	Back / Return
Exit	Exit / Cancel / Clear
i	Info / Angle
Music/Camera	Display / Media
TV Guide	Guide / EPG / -/-
*/O	Shift + 1
*/Q	Shift + 2





Original	Replacement	Original	Replacement
[=]/Text	GOTO TEXT Text / Goto		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Lang	Audio / Lang I/II		
[=]..	Sound / Title		
[-O-]	Setup / OPT /		
<<	<< / Tune-		
Pause	Pause / Step / Freeze		
>>	>> / Tune+		
Rec	Rec / Rec Mode		
Play	Play / Slow		
Stop	Stop / Hold		

