




 

 
 

 





 


 

 
 

 
 


 
 
 

 
 
 


Original	Replacement
 Power	 Power
 Power AMP	 Shift + Power
 CD	 Red
 Recorder	 Green
 Network	 Yellow
 Phono	 Blue
 AUX	 Smart
 Tuner	 Media
 Internet Radio Preset 1	 Shift + 1
 Internet Radio Preset 2	 Shift + 2
 Internet Radio Preset 3	 Shift + 3
 Play	 Play
 Pause	 Pause
 I<<	 I<<
 >>I	 >>I
 Stop	 Stop
 <<	 <<

Original	Replacement
 >>	 >>
 Preset+	 Ch +
 Preset-	 Ch -
 Pure Direct/Favorite	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Info	 Info
 Mode	 Format
 Source	 AV
 Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 1	 1

 





 


 


 
 
 




 
 


 

 
 







Original		Replacement		Original		Replacement	
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	+10		Guide				
	Clear		Exit				
	Random		Options				
	Repeat		Text				
	Search/Program		Sleep				
	Dimmer		Dual				





Original	Replacement	Original	Replacement
 Power	 Power	 Pure Direct/Favorite	 Pre Ch
 Power AMP	 Shift + Power	 Vol+	 Vol +
 CD	 Red	 Vol-	 Vol -
 Recorder	 Green	 Mute	 Mute
 Network	 Yellow	 Info	 Info
 Phono	 Blue	 Mode	 Format
 AUX	 Smart	 Source	 AV
 Tuner	 Media	 Menu	 Menu
 Play	 Play	 Up	 Up
 Pause	 Pause	 Down	 Down
 I<<	 I<<	 Right	 Right
 >>I	 >>I	 Left	 Left
 Stop	 Stop	 Enter	 Ok
 <<	 <<	 1	 1
 >>	 >>	 2	 2
 Preset+	 Ch +	 3	 3
 Preset-	 Ch -	 4	 4





	Original	Replacement	Original	Replacement
	5			
	6			
	7			
	8			
	9			
	0			
	+10			
	Clear			
	Random			
	Repeat			
	Search/Program			
	Dimmer			

