
 



 
 










| Original   | Replacement   |
|--|---|
|  Power    |  Power                   |
|  Source   |  AV / Input / RDS        |
|  1        |  1                       |
|  2        |  2                       |
|  3        |  3                       |
|  4        |  4                       |
|  5        |  5                       |
|  6        |  6                       |
|  7        |  7                       |
|  8        |  8                       |
|  9       |  9                      |
|  0      |  0                     |
|  Guide  |  Guide / EPG / -/--    |
|  Return |  Back / Return         |
|  Eco    |  D.Menu / Top          |
|  Menu   |  Menu / Home           |
|  Exit   |  Exit / Cancel / Clear |

| Original  | Replacement  |
|---|--|
|  Option      |  Setup / OPT /            |
|  OK          |  OK                       |
|  Up          |  Up                       |
|  Down        |  Down                     |
|  PR+         |  CH+ / Page+              |
|  Right/Zoom+ |  Right                    |
|  Left/Zoom-  |  Left                     |
|  PR-         |  CH- / Page-              |
|  Info        |  Info / Angle             |
|  Mute        |  Mute / Dimmer            |
|  Vol+       |  Vol+                    |
|  Vol-      |  Vol-                   |
|  Text      |  Text / Goto            |
|  Subtitle  |  Subtitle / EQ          |
|  List      |  Smart / List           |
|  Red       |  Red / Netflix / Search |
|  TV        |  Display / Media        |



