



Original	Replacement	Original	Replacement
	Power		Blue/[ ]
	Vol +		Info
	Vol -		Text
	Ch +		1
	Ch -		2
	Mute		3
	Menu		4
	Exit		5
	Back		6
	Ok		7
	Up		8
	Down		9
	Right		0
	Left		AV
	Red		Media
	Green		Play
	Yellow		>>





Original	Replacement	Original	Replacement
	<<		<<
	Stop		Stop
	Pause		Pause
	Rec		Rec
	Mark		3D
	0000		Guide

 
 
 

 
 




Original	Replacement	Original	Replacement
Power	Power	Blue/[ ]	Blue
Vol+	Vol +	Info	Info
Vol-	Vol -	Text	Text
Mute	Mute	Play	Play
PR+	Ch +	Stop	Stop
PR-	Ch -	Rec	Rec
Exit	Exit	Pause	Pause
Menu	Menu	>>	>>
Back	Back	<<	<<
Up	Up	1	1
Down	Down	2	2
Right/Zoom+	Right	3	3
Left/Zoom-	Left	4	4
OK	Ok	5	5
Red/[o]	Red	6	6
Green/Timer/List	Green	7	7
Yellow	Yellow	8	8





Original	Replacement	Original	Replacement
 9	 9		
 AV	 AV		
 SP/LP	 Media		





Original	Replacement	Original	Replacement
Power	Power	Blue/[ ]	Blue
Vol+	Vol +	Info	Info
Vol-	Vol -	Text	Text
Mute	Mute	1	1
PR+	Ch +	2	2
PR-	Ch -	3	3
Menu	Menu	4	4
Exit	Exit	5	5
Back	Back	6	6
Up	Up	7	7
Down	Down	8	8
Right/Zoom+	Right	9	9
Left/Zoom-	Left	0/-/--	0
OK	Ok	AV	AV
Red/[o]	Red	SP/LP	Media
Green/Timer/List	Green	Play	Play
Yellow	Yellow	Stop	Stop





	Original	Replacement	Original	Replacement
	>>	>>		
	<<	<<		
	Rec	Rec		
	Pause	Pause		
	Mark	3D		
	0000	GUIDE		

