 




 






 





 


























 


 
 


 

 





















 




Original		Replacement		Original		Replacement	
	Power		Power		Mute		Mute
	Netflix		Media		P+		Ch +
	TV		TV/R		P-		Ch -
	1		1		Info		Info
	2		2		Option		Options
	3		3		Smart TV		Smart
	4		4		Guide		Guide
	5		5		Menu		Menu
	6		6		Back		Back
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	Eco		3D		OK		Ok
	Source		AV		Exit		Exit
	Vol+		Vol +		Zoom+		Shift + Ch +
	Vol-		Vol -		Zoom-		Shift + Ch -





Original	Replacement
 List	 List
 Sleep	 Sleep
 PRE-CH	 Pre Ch
 FAV	 Shift + Pre Ch
 Rec	 Rec
 I<	 I<<
 Stop	 Stop
 Play	 Play
 >I	 >>I
 <<	 <<
 Pause	 Pause
 >>	 >>
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Lang	 Dual

Original	Replacement
 Subtitle	 Subt
 Text	 Text

