



Original		Replacement		Original		Replacement	
	Power		Power		9		9
	Sleep		Sleep / Timer		EPG		Guide / EPG / -/-
	Screen		Picture / Format		0		0
	Presets		Setup / OPT /		Swap		Fav / Marker / PC
	↔		TV/Radio /		Photo/Music/Movi		D.Menu / Top
	FAV		Shift + Fav / Marker / PC		World		Smart / List
	Lang		Audio / Lang I/II		Source		AV / Input / RDS
	Subtitle		Subtitle / EQ		Menu		Menu / Home
	TXT		Text / Goto		Up		Up
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		C		Exit / Cancel / Clear
	6		6		Disp.		Display / Media
	7		7		Search Mode		Shift + Red / Netflix /
	8		8		Return		Back / Return





Original	Replacement
CH+	CH+ / Page+
Info	ANGLE / Info
Vol+	VOL+
CH-	CH- / Page-
Mute	DIMMER / Mute
Vol-	VOL-
Rec	REC MODE / Rec
Pause	STEP-FREEZE / Pause / Freeze
I<<	PRESET- / I<< / Preset-
>>I	PRESET+ / >>I / Preset+
<<	TUNE- / << / Tune-
Play	SLOW / Play / Slow
Stop	HOLD / Stop / Hold
>>	TUNE+ / >> / Tune+
Red/↑/Zoom	NETFLIX / SEARCH / Red / Netflix / Search
Red/↑/Zoom	SIZE / ZOOM / Red / Netflix / Search
Green/↓/Repeat	APP / REPEAT / Green / APP / Repeat

Original	Replacement
Yellow/Root	YouTube / REPEAT A-B / Yellow / YouTube / Repeat
Blue/Title	Prime Video / RANDOM / Blue / Prime Video / Random

