







 
 


 

 

 


 
 


 















 
 
 

 

 







 


 

 
 



 
 
 




 
 
 




Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	3D		3D
	Mute		Mute
	[i+]		Info
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Menu		Menu
	Home		Smart
	Exit		Exit
	Back		Back
	Guide		Guide
	Text		Text
	[>]		Options
	Quick		TV/R
	* / 0		Format





Original		Replacement		Original	Replacement
	Subtitle		Subt		
	O)/I/II		Dual		
	*/Q	 + 	Shift + Format		
	[+ +]		Eject		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Pause		Pause		
	Play		Play		
	Stop		Stop		
	Rec		Rec		
	>>		>>		
	<<		<<		

