


 





 

 

 



 

 

 









 



 





 



 



 



 

 



 
 


 








Original	Replacement	Original	Replacement
 Power	 Power	 Top Menu	 D. Menu
 Open / Close	 Eject	 Menu List	 Menu
 1	 1	 Up	 Up
 2	 2	 Right	 Right
 3	 3	 Down	 Down
 4	 4	 Left	 Left
 5	 5	 Enter	 Ok
 6	 6	 Clear	 Exit
 7	 7	 Return	 Back
 8	 8	 I<< Skip	 I<<
 9	 9	 << Rev	 <<
 0	 0	 Fwd >>	 >>
 Audio	 Dual	 Skip >>I	 >>I
 Display	 Info	 Pause	 Pause
 Repeat	 Text	 T-Set	 List
 Zoom	 Shift + Eject	 Play	 Play
 Top Menu	 Shift + Menu	 1.3x / 0.8x Play	 Shift + Play






 

 



 



 

 
 

 

 

 


 

 






Original		Replacement		Original		Replacement	
	Stop		Stop				
	Instant Skip		Vol +				
	Timer Prog		Vol -				
	VCR		Shift + AV				
	DVD		AV				
	Setup		Options				
	Rec Mode		Shift + Rec				
	DVD Rec		Rec				
	Dubbing		Smart				





Original	Replacement
 Power	 Power
 Open / Close	 Exit
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Prog +	 Ch +
 Prog -	 Ch -
 Audio	 Dual
 Display	 Info
 Clear	 Shift + Exit

Original	Replacement
 << Rev	 <<
 Fwd >>	 >>
 Pause	 Pause
 Play	 Play
 Stop	 Stop
 VCR	 Shift + AV
 DVD	 AV
 Rec Mode	 Shift + Rec
 VCR Rec	 Rec
 Slow I>	 Shift + >>
 Search	 TV/R
 System	 Menu

