 

 

























 



 

 

 


 


 



 

 



 

 

 



 











| Original | | Replacement | | Original | | Replacement | |
|---|--------------|---|-------------------|---|------------|---|------------------------|
|  | Open / Close |  | Eject / Surround |  | 8 |  | 8 |
|  | FL Dimmer |  | Mute / Dimmer |  | 9 |  | 9 |
|  | On / Standby |  | Power |  | 0 |  | 0 |
|  | Setup |  | Setup / OPT / |  | +10 |  | Guide / EPG / -/- |
|  | Display |  | Display / Media |  | T / Search |  | Red / Netflix / Search |
|  | Zoom |  | Zoom / Size |  | Top Menu |  | D.Menu / Top |
|  | 3D |  | Shift + 3 |  | Up |  | Up |
|  | Angle |  | Info / Angle |  | Menu |  | Menu / Home |
|  | Subtitle |  | Subtitle / EQ |  | Left |  | Left |
|  | Audio |  | Audio / Lang I/II |  | Enter |  | OK |
|  | 1 |  | 1 |  | Right |  | Right |
|  | 2 |  | 2 |  | Clear |  | Exit / Cancel / Clear |
|  | 3 |  | 3 |  | Down |  | Down |
|  | 4 |  | 4 |  | Return |  | Back / Return |
|  | 5 |  | 5 |  | REV |  | << / Tune- |
|  | 6 |  | 6 |  | Play |  | Play / Slow |
|  | 7 |  | 7 |  | FWD |  | >> / Tune+ |





| Original | Replacement |
|--------------|-----------------------------|
| Pause / Step | Pause / Step / Freeze |
| I<< Skip | I<< / Preset- |
| Stop | Stop / Hold |
| Skip >>I | >>I / Preset+ |
| Slow | Shift + Play / |
| Random | Blue / Prime Video / Random |
| Memory | Smart / List |
| Repeat | Green / APP / Repeat |
| A-B RPT | Yellow / YouTube / Repeat |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

