



Original	Replacement	Original	Replacement
 Standby	 Power	 Prog-	 Ch -
 Open/Close	 Eject	 Timer Prog	 Sleep
 Input Select	 AV	 Variable Replay	 Pre Ch
 HDMI	 TV/R	 Variable Skip	 Shift + Pre Ch
 1	 1	 Top Menu	 Menu
 2	 2	 Disc Menu	 D. Menu
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 Enter	 Ok
 6	 6	 Right	 Right
 7	 7	 Down	 Down
 8	 8	 Display	 Info
 9	 9	 Return	 Shift + Back
 0	 0	 Mode	 Yellow
 Setup	 Options	 Search	 Blue
 Clear	 Exit	 <<	 <<
 Prog+	 Ch +	 Play	 Play





Original	Replacement
FWD >>	» >>
SKIP I<<	« I<<
STOP Stop	■ Stop
SKIP >>	»» >>
PAUSE Pause	Pause
VCR	SHIFT + 1 Shift + 1
HDD	SHIFT + 2 Shift + 2
DVD	SHIFT + 3 Shift + 3
TIME SLIP Time Slip	SHIFT + PROG SLEEP Shift + Sleep
DUBBING Dubbing	RETURN BACK Back
REC MODE Rec Mode	SHIFT + REC MODE Shift + Rec
REC Rec	REC MODE Rec
SUBTITLE Subtitle	AD SUBT Subt
1.3x/0.8x PPlay	PICTURE FORMAT Format
AUDIO Audio	SOUND DUAL Dual
SAT LINK Sat Link	ECO 3D 3D

Original	Replacement

