











 





 









 









| Original   | Replacement   |
|--|---|
|  VCR                    |  Green / APP / Repeat    |
|  VCR                    |  Shift + 4               |
|  DVD                    |  Red / Netflix / Search  |
|  DVD                    |  Shift + 2               |
|  Power                  |  Power                   |
|  1                      |  1                       |
|  2                      |  2                       |
|  3                      |  3                       |
|  Open/Close             |  Eject / Surround        |
|  4                      |  4                       |
|  5                     |  5                      |
|  6                    |  6                     |
|  7                    |  7                     |
|  8                    |  8                     |
|  9                    |  9                     |
|  Clear / Count. Reset |  Exit / Cancel / Clear |
|  Angle                |  Info / Angle          |

| Original   | Replacement   |
|--|---|
|  TV / VCR           |  Smart / List            |
|  0                  |  0                       |
|  Audio              |  Audio / Lang I/II       |
|  Subtitle/ATR       |  Subtitle / EQ           |
|  Memory             |  TV/Radio /              |
|  Zoom               |  Zoom / Size             |
|  E.A.M              |  Text / Goto             |
|  Play Mode          |  Picture / Format        |
|  Rec / OTR.         |  Rec / Rec Mode          |
|  Return             |  Back / Return           |
|  Display / CLK/CNT |  Display / Media        |
|  Play             |  Play / Slow           |
|  << REW           |  << / Tune-            |
|  FWD >>           |  >> / Tune+            |
|  Slow             |  Shift + Play /        |
|  Stop             |  Stop / Hold           |
|  Pause Still      |  Pause / Step / Freeze |





| Original     | Replacement                 |
|--------------|-----------------------------|
| I<< Skip     | I<< / Preset-               |
| Skip >>I     | >>I / Preset+               |
| A-B RPT      | Yellow / YouTube / Repeat   |
| Set Up / VCR | Setup / OPT /               |
| Up           | Up                          |
| Up           | CH+ / Page+                 |
| Menu         | Menu / Home                 |
| Zero Return  | Shift + 0                   |
| Left         | Left                        |
| Enter        | OK                          |
| Right        | Right                       |
| Instant Skip | Blue / Prime Video / Random |
| Down         | Down                        |
| Down         | CH- / Page-                 |

| Original | Replacement |
|----------|-------------|
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |

