


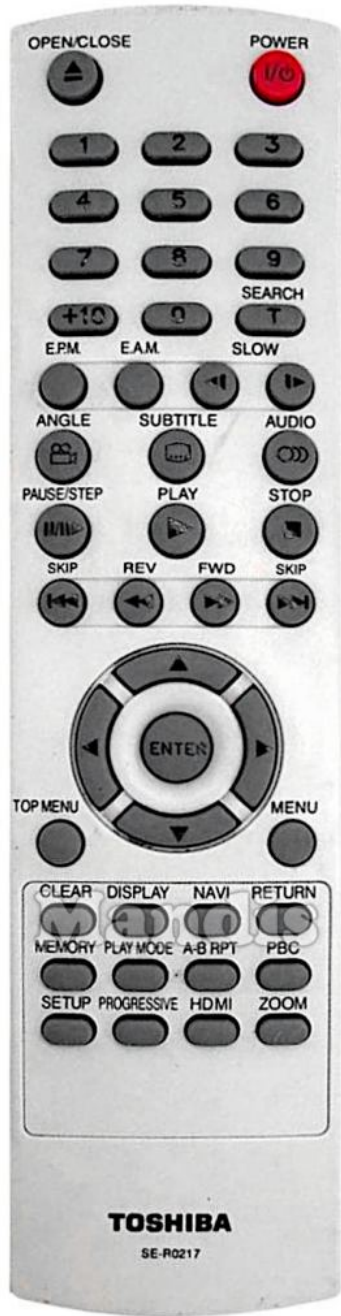


Original	Replacement
 Open/Close	 Eject / Surround
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 10	 Guide / EPG / -/--
 0	 0
 T/Search	 Red / Netflix / Search
 EPM	 Picture / Format
 EAM	 Sound / Title
 <I Slow	 CH- / Page-

Original	Replacement
 Slow I>	 CH+ / Page+
 Angle	 Info / Angle
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 I<< Skip	 I<< / Preset-
 <</REV	 << / Tune-
 FWD/>>	 >> / Tune+
 Skip >>I	 >>I / Preset+
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Top Menu	 D.Menu / Top
 Down	 Down





Original	Replacement
Menu	Menu / Home
Clear	Exit / Cancel / Clear
Display	Display / Media
Navi	Smart / List
Return	Back / Return
Memory	Fav / Marker / PC
Play Mode	Shift + Play /
A-B RPT	Yellow / YouTube / Repeat
PBC	Blue / Prime Video / Random
Setup	Setup / OPT /
Progressive	Text / Goto
HDMI	Shift + 0
HDMI	AV / Input / RDS
Zoom	Zoom / Size

Original	Replacement

