



Original	Replacement	Original	Replacement
	POWER		Power
	INFO		Info / Angle
	MUTE		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	SOURCE		AV / Input / RDS
	0		0
	AUDIO		Audio / Lang I/II
	FORMAT		Picture / Format
	BACK		Back / Return

Original	Replacement	Original	Replacement
	MENU		Menu / Home
	EXIT		Exit / Cancel / Clear
	UP		Up
	LEFT		Left
	ENTER		OK
	RIGHT		Right
	VOL+		Vol+
	DOWN		Down
	CH+		CH+ / Page+
	VOL-		Vol-
	CH-		CH- / Page-
	LIST		Smart / List
	SLEEP		Sleep / Timer
	EPG		Guide / EPG / -/-
	FAV		Fav / Marker / PC
	<<		<< / Tune-
	RED		Red / Netflix / Search





Original		Replacement	
	>>	 TUNE+	>> / Tune+
	GREEN	 APP	Green / APP / Repeat
	I<<	 PRESET-	I<< / Preset-
	YELLOW	 YouTube	Yellow / YouTube / Repeat
	BLUE	 Prime Video	Blue / Prime Video / Random
	>>	 PRESET+	>>  / Preset+
	PLAY	 SLOW	Play / Slow
	PAUSE	 STEP-FREEZE	Pause / Step / Freeze
	TEXT	 GOTO TEXT	Text / Goto
	STOP	 HOLD	Stop / Hold
	SUBTITLE	 EQ SUBTITLE	Subtitle / EQ
	RADIO	 PROGRAM TV/RADIO	TV/Radio /
	OPT	 OPT-TOOLS SETUP	Setup / OPT /
	DMP	 MEDIA DISPLAY	Display / Media
	INDEX	 TOP MENU D.MENU	D.Menu / Top
	REC	 REC MODE	Rec / Rec Mode

Original		Replacement	

