



Original	Replacement	Original	Replacement
Power	Power	-/--	Shift + Guide / EPG / -/--
Mute	Mute / Dimmer	Jump	Smart / List
Source	AV / Input / RDS	Menu	Menu / Home
P.Mode	Picture / Format	Info	Info / Angle
S.Mode	Sound / Title	Sleep	Sleep / Timer
I/II/Audio	Audio / Lang I/II	Exit	Exit / Cancel / Clear
P.Size	Zoom / Size	Up	Up
1	1	Left	Left
2	2	Enter	OK
3	3	Right	Right
4	4	Down	Down
5	5	Vol+	Vol+
6	6	Vol-	Vol-
7	7	P-	CH- / Page-
8	8	P+	CH+ / Page+
9	9	Red/D.Setup	Red / Netflix / Search
0	0	Red/D.Setup	Setup / OPT /





Original	Replacement	Original	Replacement
Green/Repeat	Green / APP / Repeat	>>I	>>I / Preset+
Yellow/Zoom	Yellow / YouTube / Repeat	DVD Menu	D.Menu / Top
Yellow/Zoom	+  Shift + Zoom /	Text	Text / Goto
Blue/Goto	Blue / Prime Video / Random	Subtitle	Subtitle / EQ
Blue/Goto	+  Shift + Text /	Guide	Guide / EPG / -/-
[≡i]/FAV.CH	Fav / Marker / PC		
[≡?]/Freeze	+  Shift + Pause / Step /		
[≡♦]/USB/SD	+  Shift + 8		
[≡+]/Tv/Radio	TV/Radio /		
Rec	Rec / Rec Mode		
Stop	Stop / Hold		
Open/Close	Eject / Surround		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
<<	<< / Tune-		
>>	>> / Tune+		
I<<	I<< / Preset-		

