



 











 



 


 
 
















 



 





 



 

 

















 

 





 

 
 





 







| Original | Replacement | Original | Replacement |
|--|---|--|--|
|  Power |  Power |  Up |  Up |
|  Info |  Info / Angle |  Left |  Left |
|  Mute |  Mute / Dimmer |  Enter |  OK |
|  1 |  1 |  Right |  Right |
|  2 |  2 |  Down |  Down |
|  3 |  3 |  CH + |  CH+ / Page+ |
|  4 |  4 |  Index |  Display / Media |
|  5 |  5 |  Vol + |  Vol+ |
|  6 |  6 |  CH - |  CH- / Page- |
|  7 |  7 |  List |  Smart / List |
|  8 |  8 |  Vol - |  Vol- |
|  9 |  9 |  Fav |  Fav / Marker / PC |
|  Source |  AV / Input / RDS |  Sleep |  Sleep / Timer |
|  0 |  0 |  EPG |  Guide / EPG / -/- |
|  Audio I/II |  Audio / Lang I/II |  Recall |  Back / Return |
|  Menu |  Menu / Home |  Red / << |  << / Tune- |
|  Exit |  Exit / Cancel / Clear |  Red / << |  Red / Netflix / Search |

| Original | Replacement | Original | Replacement |
|--|---|--|--|
|  Power |  Power |  Up |  Up |
|  Info |  Info / Angle |  Left |  Left |
|  Mute |  Mute / Dimmer |  Enter |  OK |
|  1 |  1 |  Right |  Right |
|  2 |  2 |  Down |  Down |
|  3 |  3 |  CH + |  CH+ / Page+ |
|  4 |  4 |  Index |  Display / Media |
|  5 |  5 |  Vol + |  Vol+ |
|  6 |  6 |  CH - |  CH- / Page- |
|  7 |  7 |  List |  Smart / List |
|  8 |  8 |  Vol - |  Vol- |
|  9 |  9 |  Fav |  Fav / Marker / PC |
|  Source |  AV / Input / RDS |  Sleep |  Sleep / Timer |
|  0 |  0 |  EPG |  Guide / EPG / -/- |
|  Audio I/II |  Audio / Lang I/II |  Recall |  Back / Return |
|  Menu |  Menu / Home |  Red / << |  << / Tune- |
|  Exit |  Exit / Cancel / Clear |  Red / << |  Red / Netflix / Search |








 


























 



 







 







 

 

 


















 



| Original | Replacement | Original | Replacement |
|-------------------|-----------------------------|----------|-------------|
| Green / >>> | >>> / Tune+ | | |
| Green / >>> | Green / APP / Repeat | | |
| Yellow / I<<< | I<<< / Preset- | | |
| Yellow / I<<< | Yellow / YouTube / Repeat | | |
| Blue / >>I | >>I / Preset+ | | |
| Blue / >>I | Blue / Prime Video / Random | | |
| Text / Play/Pause | Text / Goto | | |
| Text / Play/Pause | Play / Slow | | |
| Text / Play/Pause | Pause / Step / Freeze | | |
| Stop / Still | Stop / Hold | | |
| Radio | TV/Radio / | | |
| Size / Aspect | Picture / Format | | |
| Size / Aspect | Zoom / Size | | |
| [≡x] | Eject / Surround | | |
| Subtitle / [≡o] | Subtitle / EQ | | |
| DMP | D.Menu / Top | | |
| Rec | Rec / Rec Mode | | |





| Original | Replacement | Original | Replacement |
|---|---|---|--|
|  Power |  Power |  Up |  Up |
|  Info |  Info / Angle |  Left |  Left |
|  Mute |  Mute / Dimmer |  Enter |  OK |
|  1 |  1 |  Right |  Right |
|  2 |  2 |  Down |  Down |
|  3 |  3 |  CH+ |  CH+ / Page+ |
|  4 |  4 |  Index |  Display / Media |
|  5 |  5 |  Vol+ |  Vol+ |
|  6 |  6 |  CH- |  CH- / Page- |
|  7 |  7 |  List |  Smart / List |
|  8 |  8 |  Vol- |  Vol- |
|  9 |  9 |  Fav / Marker / PC |  Fav / Marker / PC |
|  Source |  AV / Input / RDS |  Sleep |  Sleep / Timer |
|  0 |  0 |  EPG |  Guide / EPG / -/- |
|  O)/I-II/Audio |  Audio / Lang I/II |  Recall |  Back / Return |
|  Menu |  Menu / Home |  Red |  Red / Netflix / Search |
|  Exit |  Exit / Cancel / Clear |  << |  << / Tune- |

| Original | Replacement | Original | Replacement |
|---|---|---|--|
|  Power |  Power |  Up |  Up |
|  Info |  Info / Angle |  Left |  Left |
|  Mute |  Mute / Dimmer |  Enter |  OK |
|  1 |  1 |  Right |  Right |
|  2 |  2 |  Down |  Down |
|  3 |  3 |  CH+ |  CH+ / Page+ |
|  4 |  4 |  Index |  Display / Media |
|  5 |  5 |  Vol+ |  Vol+ |
|  6 |  6 |  CH- |  CH- / Page- |
|  7 |  7 |  List |  Smart / List |
|  8 |  8 |  Vol- |  Vol- |
|  9 |  9 |  Fav / Marker / PC |  Fav / Marker / PC |
|  Source |  AV / Input / RDS |  Sleep |  Sleep / Timer |
|  0 |  0 |  EPG |  Guide / EPG / -/- |
|  O)/I-II/Audio |  Audio / Lang I/II |  Recall |  Back / Return |
|  Menu |  Menu / Home |  Red |  Red / Netflix / Search |
|  Exit |  Exit / Cancel / Clear |  << |  << / Tune- |





| Original | | Replacement | | Original | Replacement |
|---|---------------|---|-----------------------------|----------|-------------|
|  | Green |  | Green / APP / Repeat | | |
|  | >> |  | >> / Tune+ | | |
|  | Yellow |  | Yellow / YouTube / Repeat | | |
|  | I<< |  | I<< / Preset- | | |
|  | Blue |  | Blue / Prime Video / Random | | |
|  | >> |  | >> / Preset+ | | |
|  | [≡] |  | Text / Goto | | |
|  | Play |  | Play / Slow | | |
|  | Pause |  | Pause / Step / Freeze | | |
|  | [≡+] |  | Shift + Stop / | | |
|  | Stop/Still |  | Stop / Hold | | |
|  | Radio |  | TV/Radio / | | |
|  | [≡◆]/[++] |  | Zoom / Size | | |
|  | [≡x] |  | Eject / Surround | | |
|  | [≡o]/Subtitle |  | Subtitle / EQ | | |
|  | DMP |  | D.Menu / Top | | |
|  | Rec |  | Rec / Rec Mode | | |

