 



 









 















 









 



 







 



 













 



 











 

 



 






Original	Replacement	Original	Replacement
 Power	 Power	 Text	 Text / Goto
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 Play/Pause/Hold	 Play / Slow	 Menu	 Menu / Home
 Pause	 Pause / Step / Freeze	 Up	 Up
 Stop/Size	 Stop / Hold	 ??	 Info / Angle
 Rec Menu	 Rec / Rec Mode	 Left	 Left
 <<	 << / Tune-	 OK	 OK
 >> / Cancel	 >> / Tune+	 Right	 Right
 I<< / Index	 I<< / Preset-	 Exit	 Exit / Cancel / Clear
 >>I/Reveal	 >>I / Preset+	 Down	 Down
 Nicam	 Audio / Lang I/II	 Back	 Back / Return
 Subtitle	 Subtitle / EQ	 Vol+	 Vol+
 Aspect	 Picture / Format	 List	 Smart / List
 Sleep	 Sleep / Timer	 CH+	 CH+ / Page+
 Tv	 TV/Radio /	 Vol-	 Vol-
 Subpage	 D.Menu / Top	 Display	 Display / Media
 PC Auto	 Setup / OPT /	 CH-	 CH- / Page-





	Original	Replacement		Original	Replacement
	1	 1	1	 DTV/Radio	 Shift + TV/Radio / Program
	2	 2	2	 Media	 Shift + Display / Media
	3	 3	3	 -/--	 Shift + Guide / EPG / -/--
	4	 4	4	 Repeat	 Shift + Green / APP / Repeat
	5	 5	5	 A-B	 Shift + Yellow / YouTube / Repeat
	6	 6	6		
	7	 7	7		
	8	 8	8		
	9	 9	9		
	TVG	 Guide / EPG / -/--			
	0	 0	0		
	FAV	 Fav / Marker / PC			
	Red	 Red / Netflix / Search			
	Green	 Green / APP / Repeat			
	Yellow	 Yellow / YouTube / Repeat			
	Blue	 Blue / Prime Video / Random			
	Freeze	 Shift + Pause / Step / Freeze			

