

 
 



 




 





 

 







 

 



 
















Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 AUDIO	 Red	 Vol-	 Vol -
 CD	 Green	 Auto	 Subt
 AUX	 Yellow	 DSP -	 Shift + Left
 TV	 Blue	 DSP +	 Shift + Right
 VCR	 Shift + Red	 Stereo	 Dual
 DVD	 Shift + Green	 Setup / OSD	 Options
 CABLE	 Shift + Yellow	 Menu / T.Tone	 Menu
 SAT	 Shift + Blue	 Up	 Up
 CH Sel	 TV/R	 Left	 Left
 CH/Level Up	 Ch +	 Enter	 Ok
 CH/Level Down	 Ch -	 Right	 Right
 SPK SET	 Exit	 Down	 Down
 PLII PARA.	 D. Menu	 Display / Sleep	 Info
 Adjust -	 Shift + Down	 Display / Sleep	 Sleep
 Adjust +	 Shift + Up	 Return /	 Back
 Mute	 Mute	 Stop / P.Scan	 Stop





Original	Replacement	Original	Replacement
 << / Tune -	 <<	 AUX Pause	 Shift + Pause
 >> / Tune +	 >>	 AUX Play	 Shift + Play
 I<< / Preset -	 I<<	 AUX Stop	 Shift + Stop
 >>I / Preset +	 >>I	 AUX <<	 Shift + <<
 7CH Dir	 ECO 3D	 AUX >>	 Shift + >>
 1 / Tuner	 1	 AUX >>I	 Shift + >>I
 2 / CD	 2	 AUX I<<	 Shift + I<<
 3 / AUX	 3		
 4 / Tape	 4		
 5	 5		
 6 / Video 1	 6		
 7 / Video 2	 7		
 8 / Video 3	 8		
 9	 9		
 0	 0		
 AUX Power /	 Shift + Power		
 AUX Rec	 Shift + Rec		







Original	Replacement	Original	Replacement
 AUDIO	 Red	 TV 3	 3
 CD	 Green	 TV 4	 4
 AUX	 Yellow	 TV 5	 5
 TV	 Blue	 TV 6	 6
 VCR	 Shift + Red	 TV 7	 7
 DVD	 Shift + Green	 TV 8	 8
 CABLE	 Shift + Yellow	 TV 9	 9
 SAT	 Shift + Blue	 TV 0	 0
 TV Power	 Power	 CABLE Power	 Shift + Power
 TV CH +	 Ch +	 CABLE CH/Level +	 Shift + Ch +
 TV CH -	 Ch -	 CABLE CH/Level -	 Shift + Ch -
 TV CH Sel.	 Media	 CABLE CH Sel.	 Shift + Smart
 TV Mute	 Mute	 CABLE Mute	 Shift + Mute
 TV Volume +	 Vol +	 CABLE Volume	 Shift + Vol +
 TV Volume -	 Vol -	 CABLE Volume -	 Shift + Vol -
 TV 1	 1	 CABLE 1	 Shift + 1
 TV 2	 2	 CABLE 2	 Shift + 2




 









 













 
 
 
 

 
 

 

 

 

 

 

 





 









 










	Original	Replacement		Original	Replacement
	CABLE 3	SHIFT +  Shift + 3			
	CABLE 4	SHIFT +  Shift + 4			
	CABLE 5	SHIFT +  Shift + 5			
	CABLE 6	SHIFT +  Shift + 6			
	CABLE 7	SHIFT +  Shift + 7			
	CABLE 8	SHIFT +  Shift + 8			
	CABLE 9	SHIFT +  Shift + 9			
	CABLE 0	SHIFT +  Shift + 0			







Original	Replacement	Original	Replacement
 AUDIO	 Red	 DVD Right	 Right
 CD	 Green	 DVD Down	 Down
 AUX	 Yellow	 DVD Display	 Info
 TV	 Blue	 DVD Pause	 Pause
 VCR	 Shift + Red	 DVD Play	 Play
 DVD	 Shift + Green	 DVD Stop	 Stop
 SAT	 Shift + Blue	 DVD <<	 <<
 CABLE	 Shift + Yellow	 DVD >>	 >>
 DVD Power	 Power	 DVD I<<	 I<<
 DVD Menu	 Menu	 DVD >>I	 >>I
 DVD Audio Sel.	 Dual	 DVD 1	 1
 DVD Subtitle	 Subt	 DVD 2	 2
 DVD Zoom	 3D	 DVD 3	 3
 DVD OSD /	 Format	 DVD 4	 4
 DVD Up	 Up	 DVD 5	 5
 DVD Left	 Left	 DVD 6	 6
 DVD Enter	 Ok	 DVD 7	 7






 



 

 
 
 





 
 
 

 
 


 
 



 
 

 

 






 

 

 
 


 



 
 


 
 


 
 


 
 

	Original	Replacement	
	DVD 8	<b>8</b>	8
	DVD 9	<b>9</b>	9
	DVD 0	<b>0</b>	0
	SAT Power	<b>SHIFT</b> +	Shift + Power
	SAT CH +	<b>SHIFT</b> + <b>+</b>	Shift + Ch +
	SAT CH -	<b>SHIFT</b> + <b>-</b>	Shift + Ch -
	SAT CH Sel.	<b>SHIFT</b> + <b>APP MEDIA</b>	Shift + Media
	SAT Mute	<b>SHIFT</b> + <b>MUTE</b>	Shift + Mute
	SAT Volume +	<b>SHIFT</b> + <b>+ VOL</b>	Shift + Vol +
	SAT Volume -	<b>SHIFT</b> + <b>- VOL</b>	Shift + Vol -
	SAT 1	<b>SHIFT</b> + <b>1</b>	Shift + 1
	SAT 2	<b>SHIFT</b> + <b>2</b>	Shift + 2
	SAT 3	<b>SHIFT</b> + <b>3</b>	Shift + 3
	SAT 4	<b>SHIFT</b> + <b>4</b>	Shift + 4
	SAT 5	<b>SHIFT</b> + <b>5</b>	Shift + 5
	SAT 6	<b>SHIFT</b> + <b>6</b>	Shift + 6
	SAT 7	<b>SHIFT</b> + <b>7</b>	Shift + 7

	Original	Replacement	
	SAT 8	<b>SHIFT</b> + <b>8</b>	Shift + 8
	SAT 9	<b>SHIFT</b> + <b>9</b>	Shift + 9
	SAT 0	<b>SHIFT</b> + <b>0</b>	Shift + 0




 

 

 

 

 

 

 

 
 

 

 

 




Original	Replacement	Original	Replacement
 AUDIO	 Red	 CD 5	 5
 CD	 Green	 CD 6	 6
 AUX	 Yellow	 CD 7	 7
 TV	 Blue	 CD 8	 8
 VCR	 Shift + Red	 CD 9	 9
 SAT	 Shift + Blue	 CD 0	 0
 CABLE	 Shift + Yellow	 VCR Power	 Shift + Power
 DVD	 Shift + Green	 VCR CH Sel.	 Shift + Media
 CD Pause	 Pause	 VCR Rec	 Shift + Rec
 CD Play	 Play	 VCR Play	 Shift + Play
 CD Stop	 Stop	 VCR Mute	 Shift + Mute
 CD I<<	 I<<	 VCR >>	 Shift + >>
 CD >>I	 >>I	 VCR <<	 Shift + <<
 CD 1	 1	 VCR Volume -	 Shift + Vol -
 CD 2	 2	 VCR Volume +	 Shift + Vol +
 CD 3	 3	 VCR CH+	 Shift + Ch +
 CD 4	 4	 VCR CH-	 Shift + Ch -





Original	Replacement	Original	Replacement
	 Shift + Pause		
	 Shift + Stop		
	 Shift + 1		
	 Shift + 2		
	 Shift + 3		
	 Shift + 4		
	 Shift + 5		
	 Shift + 6		
	 Shift + 7		
	 Shift + 8		
	 Shift + 9		
	 Shift + 0		

