


 
 
 
 





 


 



Original	Replacement	Original	Replacement
 Power	 Power	 PIP	 Guide
 AV	 AV	 TINT	 3D
 Aux	 Shift + AV	 *	 Options
 Mute	 Mute	 ○	 Shift + Options
 1	 1	 ○i	 Subt
 2	 2	 Fa	 Dual
 3	 3	 Sol	 Shift + Dual
 4	 4	 ←•→	 Shift + Smart
 5	 5	 i	 Info
 6	 6	 Text	 Text
 7	 7	 TV	 TV/R
 8	 8	 Up / P+	 Up
 9	 9	 Up / P+	 Ch +
 0	 0	 Down / P-	 Down
 P/C / B-R	 Pre Ch	 Down / P-	 Ch -
 HIFI M+1	 Smart	 Right / Vol+	 Right
 ••	 Media	 Right / Vol+	 Vol +



