

 



 




 








 




 

 

 






| Original   | Replacement   |
|--|---|
|  Power    |  Power                         |
|  DTV/ATV  |  Display / Media               |
|  1        |  1                             |
|  2        |  2                             |
|  3        |  3                             |
|  4        |  4                             |
|  5        |  5                             |
|  6        |  6                             |
|  7        |  7                             |
|  8       |  8                            |
|  9      |  9                           |
|  0      |  0                           |
|  -/--   |  Shift + Guide / EPG / -/-- |
|  Recall |  Back / Return               |
|  P.Mode |  Picture / Format            |
|  S.Mode |  Sound / Title               |
|  Aspect |  Zoom / Size                 |

| Original  | Replacement  |
|---|--|
|  Menu    |  Menu / Home              |
|  Source  |  AV / Input / RDS         |
|  Exit    |  Exit / Cancel / Clear    |
|  i       |  Info / Angle             |
|  Up      |  Up                       |
|  Down    |  Down                     |
|  Right   |  Right                    |
|  Left    |  Left                     |
|  Enter   |  OK                       |
|  V+     |  Vol+                    |
|  V-    |  Vol-                   |
|  Mute  |  Mute / Dimmer          |
|  MTS   |  Eject / Surround       |
|  Timer |  Sleep / Timer          |
|  P+    |  CH+ / Page+            |
|  P-    |  CH- / Page-            |
|  Red   |  Red / Netflix / Search |





| Original | Replacement                   |
|----------|-------------------------------|
|          | Green / APP / Repeat          |
|          | Yellow / YouTube / Repeat     |
|          | Blue / Prime Video / Random   |
|          | << / Tune-                    |
|          | >> / Tune+                    |
|          | I<< / Preset-                 |
|          | >>I / Preset+                 |
|          | Play / Slow                   |
|          | Pause / Step / Freeze         |
|          | Stop / Hold                   |
|          | Text / Goto                   |
|          | Subtitle / EQ                 |
|          | DTV/Radio/Repeat / TV/Radio / |
|          | List / Smart / List           |
|          | Fav / Marker / PC             |
|          | Guide / EPG / -/--            |
|          | Rec / Rec Mode                |

| Original | Replacement               |
|----------|---------------------------|
|          | Rec Menu / D.Menu / Top   |
|          | T-Shift / Setup / OPT /   |
|          | Still / Audio / Lang I/II |
|          |                           |
|          |                           |
|          |                           |
|          |                           |
|          |                           |
|          |                           |
|          |                           |
|          |                           |
|          |                           |
|          |                           |
|          |                           |
|          |                           |
|          |                           |
|          |                           |
|          |                           |
|          |                           |
|          |                           |

