



Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AUX	+	Shift + 7
	USB	+	Shift + 8
	Card	+	Shift + 4
	DVD	+	Shift + 2
	Tuner	+	Shift + 6
	Tape	+	Shift + 5
	OSD/Info		Info / Angle
	Prog		TV/Radio /
	Setup		Setup / OPT /
	Menu		Menu / Home
	Audio		Audio / Lang I/II
	Title	+	Shift + Sound / Title
	Subtitle		Subtitle / EQ
	Timer	+	Shift + Sleep / Timer
	+10		Guide / EPG / -/-
	Sleep		Sleep / Timer
	Play		Play / Slow
	Clock		Back / Return
	Pause		Pause / Step / Freeze
	Enter		OK
	Up/Preset+		Up
	Down/Preset-		Down
	>>/Tun+		>> / Tune+





Original	Replacement
<</Tun-	<< / Tune-
I<<	I<< / Preset-
>>I	>>I / Preset+
Stop	Stop / Hold
Repeat	Green / APP / Repeat
Goto	Text / Goto
Rec	Rec / Rec Mode
Vol-	Vol-
Vol+	Vol+
Mute	Mute / Dimmer
Demo	Picture / Format
EQ	Shift + Subtitle / EQ
Bass	Shift + Audio / Lang I/II
St/Mono	Sound / Title
Bookmark	Display / Media
Intro	D.Menu / Top
Rand	Blue / Prime Video / Random

Original	Replacement
RDS/A-B	AV / Input / RDS
Zoom	Zoom / Size
P.Scan	Eject / Surround
Angle	Shift + Info / Angle
Step	Shift + Pause / Step /
Slow	Shift + Play /

