




























 











Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 SAT	 Shift + 0
 SAT	 AV / Input / RDS
 TV/Radio	 TV/Radio /
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ

Original	Replacement
 Text	 Text / Goto
 Live	 Display / Media
 VOD	 Smart / List
 Series	 Shift + Display / Media
 WEB TV	 Shift + Smart / List
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 EPG	 Guide / EPG / -/--
 Down	 Down
 Info	 Info / Angle
 Vol+	 Vol+
 Fav	 Fav / Marker / PC
 Page+	 CH+ / Page+





Original	Replacement
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Page-	 CH- / Page-
 Red / F1	 Red / Netflix / Search
 Green / F2	 Green / APP / Repeat
 Yellow / F3	 Yellow / YouTube / Repeat
 Blue / IPTV	 Blue / Prime Video / Random
 Option	 Setup / OPT /
 V-Format	 Picture / Format
 Resolution	 Zoom / Size
 Sleep	 Sleep / Timer
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Replacement
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode

