 



 

 




Original	Replacement
 Open/Close	 Eject / Surround
 Power	 Power
 Red/Program	 Red / Netflix / Search
 Green/Marker	 Green / APP / Repeat
 Yellow/Digest	 Yellow / YouTube / Repeat
 Blue/Zoom	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 Sleep	 Sleep / Timer
 4	 4
 5	 5
 6	 6
 SW+	 CH+ / Page+
 7	 7
 8	 8
 9	 9

Original	Replacement
 SW-	 CH- / Page-
 Clear	 Exit / Cancel / Clear
 0	 0
 Search	 Shift + Red / Netflix /
 Mute	 Mute / Dimmer
 Display	 Display / Media
 Setup	 Setup / OPT /
 Volume+	 Vol+
 Option	 Shift + Setup / OPT / Tools
 Home	 Menu / Home
 Volume-	 Vol-
 Top Menu	 D.Menu / Top
 Pop-Up/Menu	 Smart / List
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right





Original	Replacement
 Return	 Back / Return
 Down	 Down
 On Screen	 Picture / Format
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 <<I	 I<< / Preset-
 I>>	 >>I / Preset+
 <<TUNING >>	 << / Tune-
 >>TUNING >>	 >> / Tune+
 Dimmer	 Shift + Mute / Dimmer
 Status	 Text / Goto
 I<</ < Preset	 Shift + I<< / Preset-
 >>I/Preset >	 Shift + >>I / Preset+
 PIP	 Info / Angle
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II

Original	Replacement
 Memory	 Shift + Smart / List
 Shuffle	 Shift + Eject / Surround
 Repeat	 Shift + Green / APP / REPEAT
 A-B	 Shift + Yellow / YouTube / REPEAT A-B
 iPod	 Shift + Display / Media
 TV	 TV/Radio /
 STB	 Shift + 3
 Tuner	 Shift + 6
 Disc/USB/Net	 Shift + 8
 AUX	 Shift + 7
 Portable	 AV / Input / RDS

