

 




 





| Original | Replacement |
|----------|---------------------------|
| Power | Power |
| Mute | Mute / Dimmer |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| --- | Shift + Guide / EPG / --- |
| Recall | Back / Return |
| Sleep | Sleep / Timer |
| Audio | Audio / Lang I/II |
| Aspect | Shift + Picture / Format |

| Original | Replacement |
|----------|------------------------|
| Input | AV / Input / RDS |
| Info | Info / Angle |
| Menu | Menu / Home |
| Exit | Exit / Cancel / Clear |
| Up | Up |
| Down | Down |
| Right | Right |
| Left | Left |
| OK | OK |
| Vol+ | Vol+ |
| Vol- | Vol- |
| FAV | Fav / Marker / PC |
| P.Mode | Picture / Format |
| S.Mode | Sound / Title |
| CH+ | CH+ / Page+ |
| CH- | CH- / Page- |
| Red | Red / Netflix / Search |





| Original | Replacement |
|---|---|
|  |  Green / APP / Repeat |
|  |  Yellow / YouTube / Repeat |
|  |  Blue / Prime Video / Random |
|  |  Shift + Menu / |
|  |  Setup / OPT / |
|  |  Display / Media |
|  |  Text / Goto |
|  |  Play / Slow |
|  |  Guide / EPG / -/-- |
|  |  I<< / Preset- |
|  |  Stop / Hold |
|  |  Rec / Rec Mode |
|  |  Zoom / Size |
|  |  Pause / Step / Freeze |
|  |  << / Tune- |
|  |  TV/Radio / |
|  |  >> / Tune+ |

| Original | Replacement |
|---|--|
|  |  Smart / List |
|  |  Subtitle / EQ |
|  |  >>I / Preset+ |
|  |  Eject / Surround |

