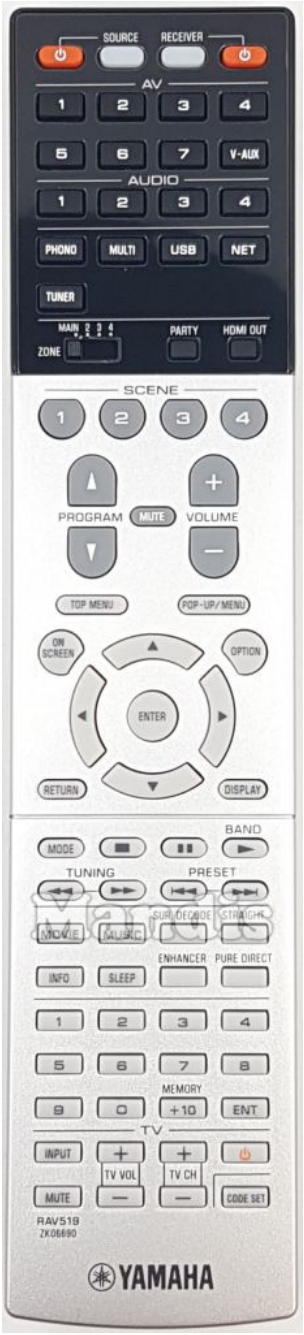

Originalfernbedienung	Ersatzfernbedienung
Power Receiver	Power
Power Source	Shift + Power
AV1	Shift + 1
AV2	Shift + 2
AV3	Shift + 3
AV4	Shift + 4
AV5	Shift + 5
AV6	Shift + 6
AV7	Shift + 7
V-AUX	Shift + 8
Audio 1	Shift + 9
Audio 2	Shift + Guide / EPG / -/--
Audio 3	Shift + 0
Audio 4	Shift + Fav / Marker / PC
Phono	Shift + Red / Netflix /
Multi	Shift + Green / APP /
USB	Shift + Blue / Prime Video / Random

Originalfernbedienung	Ersatzfernbedienung
Net	Shift + Smart / List
Tuner	Shift + Yellow / YouTube /
Party	Smart / List
HDMI Out	AV / Input / RDS
Scene 1	Red / Netflix / Search
Scene 2	Green / APP / Repeat
Scene 3	Yellow / YouTube / Repeat
Scene 4	Blue / Prime Video / Random
Program Up	CH+ / Page+
Program Down	CH- / Page-
Volume+	Vol +
Volume-	Vol -
Mute	Mute / Dimmer
Top Menu	D. Menu / Top
Pop-Up Menu	Menu / Home
On Screen	Zoom / Size
Option	Setup / OPT / Tools

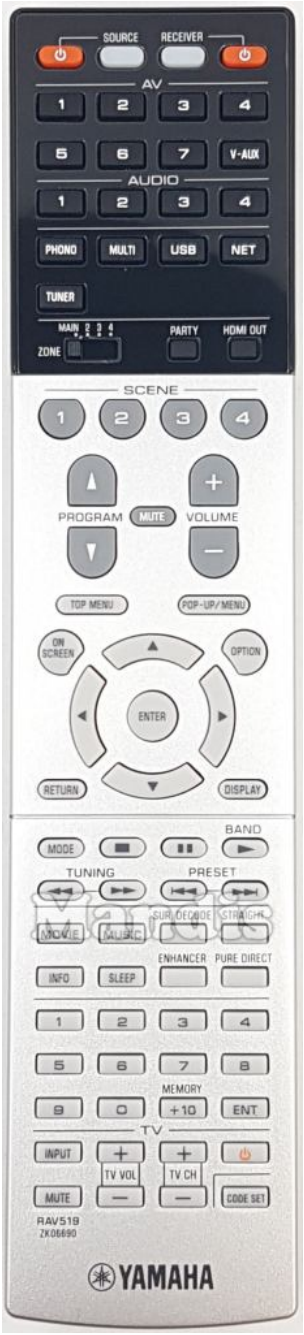

Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
RETURN	Return	RETURN BACK	Back / Return	SUR. DECODE	Sur Decode	SURROUND	Eject / Surround
DISPLAY	Display	MEDIA DISPLAY	Display / Media	STRAIGHT	Straight	TITLE SOUND	Sound / Title
▲	Up	▲	Up	INFO	Info	ANGLE INFO	Info / Angle
▼	Down	▼	Down	SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
▶	Right	▶	Right	ENHANCER	Enhancer	GOTO TEXT	Text / Goto
◀	Left	◀	Left	PURE DIRECT	Pure Direct	PROGRAM TV/ RADIO	TV/ Radio /
ENTER	Enter	OK	OK	1	1	TV 1	1
MODE	Mode	FORMAT PICTURE	Picture / Format	2	2	DVD 2	2
■	Stop	HOLD ■	Stop / Hold	3	3	CD - STB 3	3
❚❚	Pause	STEP - FREEZE ❚❚	Pause / Step / Freeze	4	4	VIDEO 4	4
BAND ▶	Play/ Band	SLOW ▶	Play / Slow	5	5	TAPE 5	5
◀◀	<< Tuning	TUNE- ◀◀	<< / Tune-	6	6	TUNER 6	6
▶▶	Tuning >>	TUNE+ ▶▶	>> / Tune+	7	7	AUX - HDD 7	7
⏮	I << Preset	PRESET- ⏮	I << / Preset-	8	8	USB 8	8
⏭	Preset >>I	PRESET+ ⏭	>>I / Preset+	9	9	BLUETOOTH 9	9
MOVIE	Movie	EQ SUBTITLE	Subtitle / EQ	0	0	HDMI - SAT 0	0
MUSIC	Music	LANG I/II AUDIO	Audio / Lang I/II	MEMORY +10	+10/ Memory	-/-- GUIDE EPG	Guide / EPG / -/--

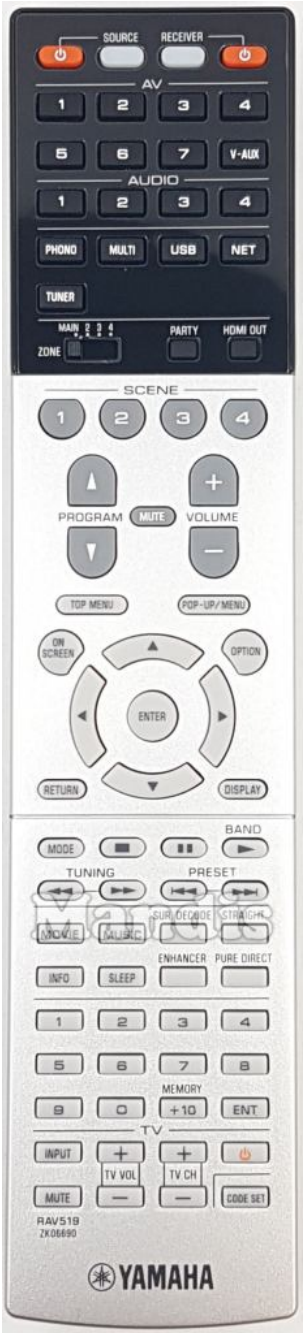

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
ENT ENT.	PC FAV MARKER Fav / Marker / PC		

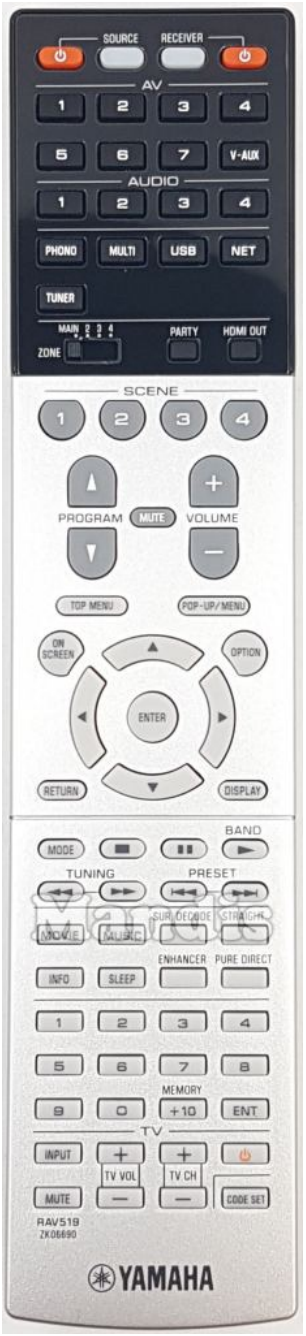

Originalfernbedienung	Ersatzfernbedienung
Power Receiver	Power
Power Source	Shift + Power
AV1	Shift + 1
AV2	Shift + 2
AV3	Shift + 3
AV4	Shift + 4
AV5	Shift + 5
AV6	Shift + 6
AV7	Shift + 7
V-AUX	Shift + 8
Audio 1	Shift + 9
Audio 2	Shift + Guide / EPG / -/--
Audio 3	Shift + 0
Audio 4	Shift + Fav / Marker / PC
Phono	Shift + Red / Netflix /
Net	Shift + Smart / List
USB	Shift + Blue / Prime Video / Random

Originalfernbedienung	Ersatzfernbedienung
Tuner	Shift + Yellow / YouTube /
Party	Smart / List
HDMI Out	AV / Input / RDS
Scene 1	Red / Netflix / Search
Scene 2	Green / APP / Repeat
Scene 3	Yellow / YouTube / Repeat
Scene 4	Blue / Prime Video / Random
Mute	Mute / Dimmer
Volume+	Vol +
Volume-	Vol -
Pop-Up Menu	Menu / Home
Top Menu	D. Menu / Top
Option	Setup / OPT /
Display	Display / Media
Return	Back / Return
On Screen	Zoom / Size
Up	Up

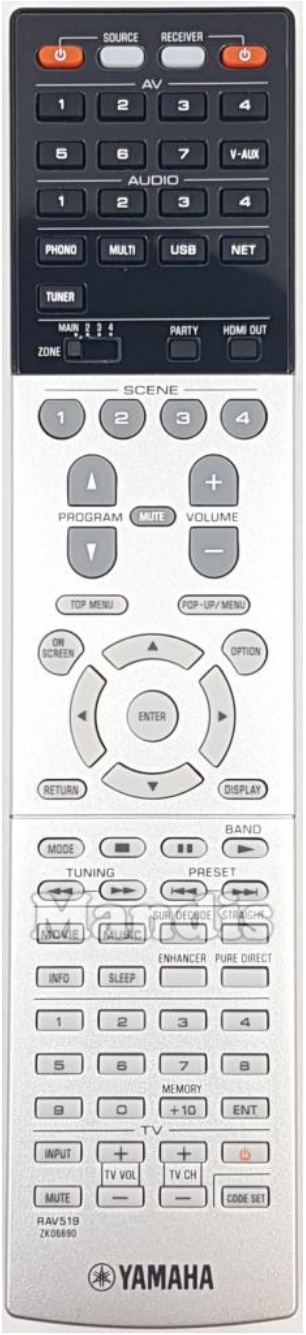

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Down	Down	4	4
Right	Right	5	5
Left	Left	6	6
Enter	OK	7	7
Mode	Picture / Format	8	8
Stop	Stop / Hold	9	9
Pause	Pause / Step / Freeze	0	0
Play/ Band	Play / Slow	+10/ Memory	Guide / EPG / -/--
<< Tuning	<< / Tune-	ENT	Fav / Marker / PC
Tuning >>	>> / Tune+		
I << Preset	I << / Preset-		
Preset >>I	>>I / Preset+		
Info	Info / Angle		
Sleep	Sleep / Timer		
1	1		
2	2		
3	3		

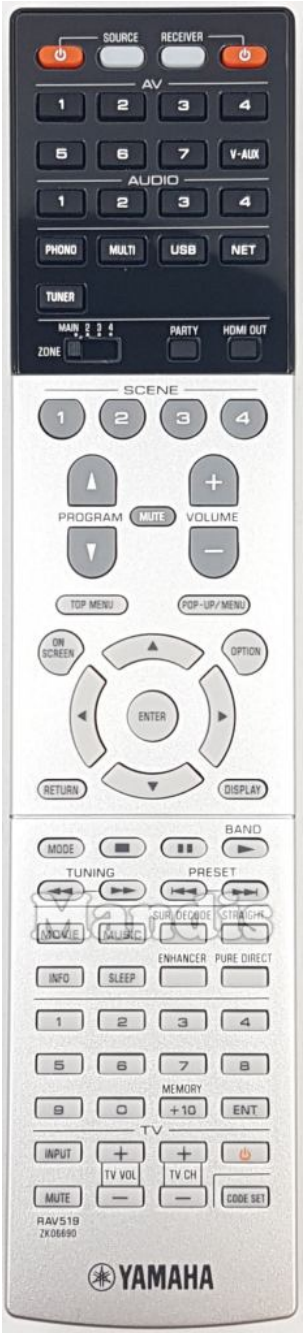

Originalfernbedienung	Ersatzfernbedienung
Power Receiver	Power
Power Source	Shift + Power
AV1	Shift + 1
AV2	Shift + 2
AV3	Shift + 3
AV4	Shift + 4
AV5	Shift + 5
AV6	Shift + 6
AV7	Shift + 7
V-AUX	Shift + 8
Audio 1	Shift + 9
Audio 2	Shift + Guide / EPG / -/--
Audio 3	Shift + 0
Audio 4	Shift + Fav / Marker / PC
Phono	Shift + Red / Netflix /
USB	Shift + Blue / Prime
Net	Shift + Smart / List

Originalfernbedienung	Ersatzfernbedienung
Tuner	Shift + Shift + Yellow / YouTube /
Party	Smart / List
HDMI Out	AV / Input / RDS
Scene 1	Red / Netflix / Search
Scene 2	Green / APP / Repeat
Scene 3	Yellow / YouTube / Repeat
Scene 4	Blue / Prime Video / Random
Volume+	Vol +
Volume -	Vol -
Mute	Mute / Dimmer
Pop-Up Menu	Menu / Home
Top Menu	D. Menu / Top
Info	Info / Angle
Option	Setup / OPT /
Return	Back / Return
On Screen	Zoom / Size
Enter	OK

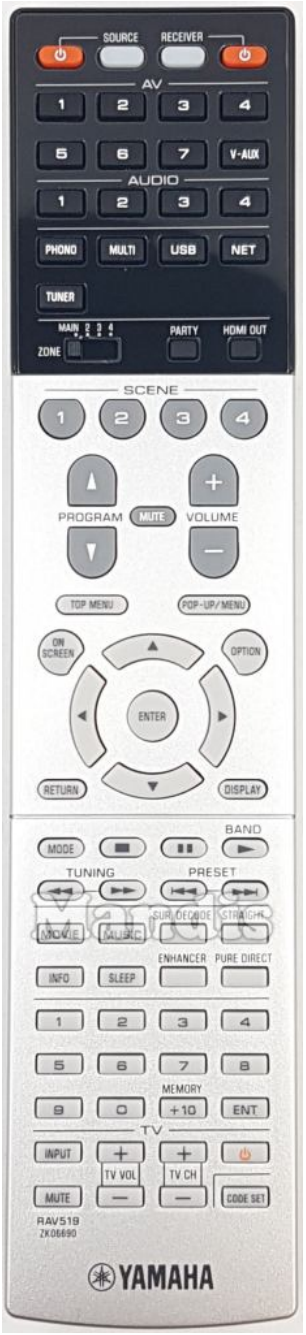

Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
DISPLAY	Display	MEDIA DISPLAY	Display / Media	4	4	VIDEO 4	4
▲	Up	▲	Up	5	5	TAPE 5	5
▼	Down	▼	Down	6	6	TUNER 6	6
▶	Right	▶	Right	7	7	AUX-HDD 7	7
◀	Left	◀	Left	8	8	USB 8	8
MODE	Mode	FORMAT PICTURE	Picture / Format	9	9	BLUETOOTH 9	9
■	Stop	HOLD ■	Stop / Hold	0	0	HDMI-SAT 0	0
❚❚	Pause	STEP-FREEZE ❚❚	Pause / Step / Freeze	MEMORY +10	+10/ Memory	-/-- GUIDE EPG	Guide / EPG / -/--
BAND ▶	Play/ Band	SLOW ▶	Play / Slow	ENT	ENT	PC FAV MARKER	Fav / Marker / PC
◀◀	<< Tuning	TUNE- ◀◀	<< / Tune-				
▶▶	Tuning >>	TUNE+ ▶▶	>> / Tune+				
❙◀◀	I << Preset	PRESET- ❙◀◀	I << / Preset-				
▶▶❙	Preset >>I	PRESET+ ▶▶❙	>>I / Preset+				
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer				
1	1	TV 1	1				
2	2	DVD 2	2				
3	3	CD-STB 3	3				

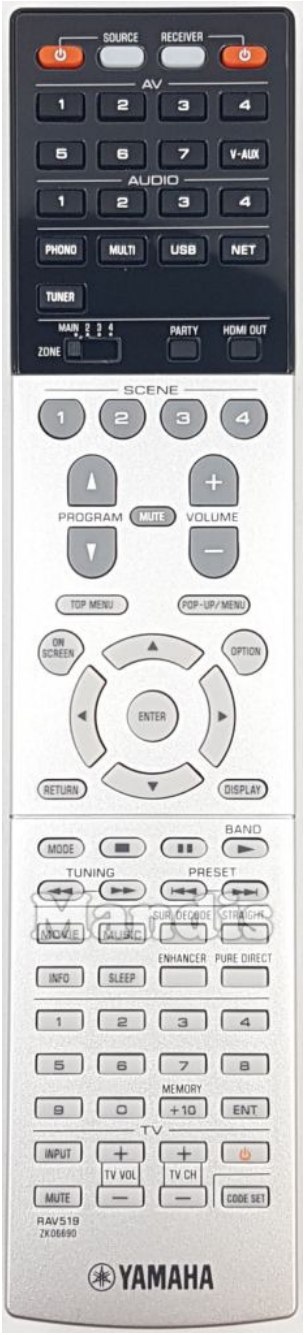

Originalfernbedienung	Ersatzfernbedienung
Power Receiver	Power
Power Source	Shift + Power
AV1	Shift + 1
AV2	Shift + 2
AV3	Shift + 3
AV4	Shift + 4
AV5	Shift + 5
AV6	Shift + 6
AV7	Shift + 7
V-AUX	Shift + 8
Audio 1	Shift + 9
Audio 2	Shift + Guide / EPG / -/--
Audio 3	Shift + 0
Audio 4	Shift + Fav / Marker / PC
Phono	Shift + Red / Netflix /
USB	Shift + Blue / Prime
Net	Shift + Smart / List

Originalfernbedienung	Ersatzfernbedienung
Tuner	Shift + Shift + Yellow / YouTube /
Party	Smart / List
HDMI Out	AV / Input / RDS
Scene 1	Red / Netflix / Search
Scene 2	Green / APP / Repeat
Scene 3	Yellow / YouTube / Repeat
Scene 4	Blue / Prime Video / Random
Volume+	Vol +
Volume-	Vol -
Mute	Mute / Dimmer
Top Menu	D. Menu / Top
Pop-Up Menu	Menu / Home
On Screen	Zoom / Size
Option	Setup / OPT /
Return	Back / Return
Display	Display / Media
Up	Up

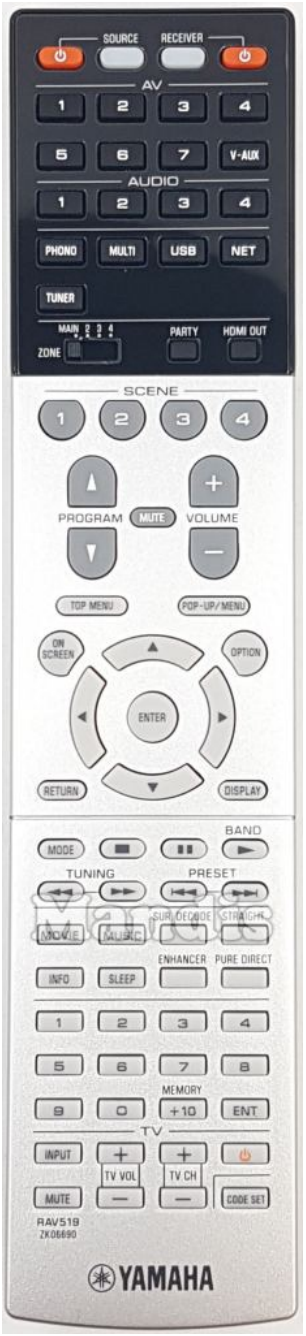

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Down	Down	4	4
Right	Right	5	5
Left	Left	6	6
Enter	OK	7	7
Mode	Picture / Format	8	8
Stop	Stop / Hold	9	9
Pause	Pause / Step / Freeze	0	0
Play/ Band	Play / Slow	+10/ Memory	Guide / EPG / -/--
<< Tuning	<< / Tune-	ENT	Fav / Marker / PC
Tuning >>	>> / Tune+		
I << Preset	I << / Preset-		
Preset >>I	>>I / Preset+		
Info	Info / Angle		
Sleep	Sleep / Timer		
1	1		
2	2		
3	3		