Mandis shop

Sony RM-SCU37

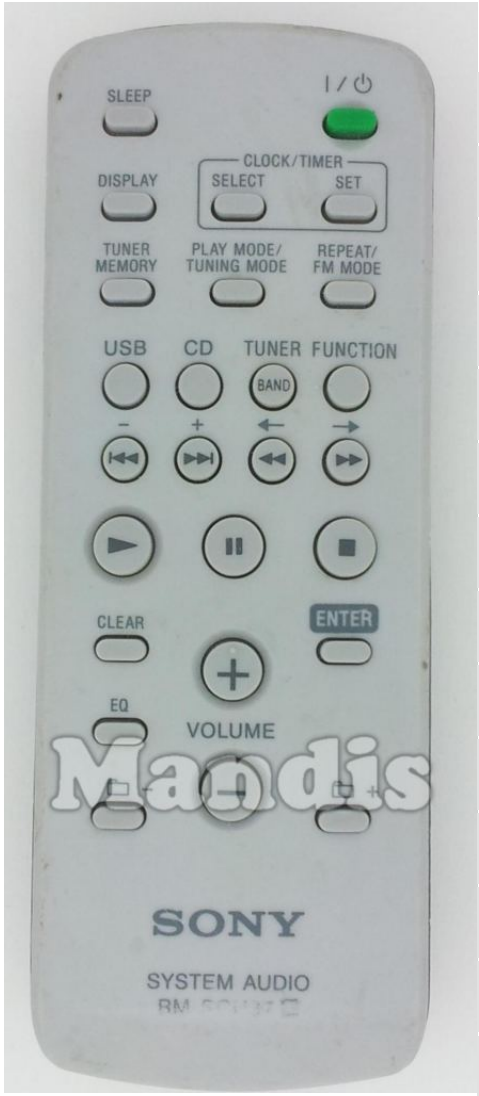

Original		Replacement	
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
I / ⏻	Standby		Power
DISPLAY	Display	MEDIA DISPLAY	Display / Media
SELECT	Clock/Timer	TOP MENU D.MENU	D.Menu / Top
SET	Clock/Timer Set	OPT-TOOLS SETUP	Setup / OPT /
TUNER MEMORY	Tuner Memory	LIST SMART	Smart / List
PLAY MODE/ TUNING MODE	Play Mode/Tuning Mode	PROGRAM TV/ RADIO	TV/Radio /
REPEAT/ FM MODE	Repeat/FM	APP REPEAT	Green / APP / Repeat
USB	USB	USB 8	8
CD	CD	CD - STB 3	3
TUNER BAND	Band/Tuner	TUNER 6	6
FUNCTION	Function	HOME MENU	Menu / Home
I<<⁄-	I<< / Preset-	PRESET-	
>>I⁄+	>>I / Preset+	PRESET+	
<<⁄←	<< / Tune-	TUNE-	
>>⁄→	>> / Tune+	TUNE+	
Play	Play / Slow	SLOW	

Original		Replacement	
Pause	Pause	STEP - FREEZE	Pause / Step / Freeze
Stop	Stop	HOLD	Stop / Hold
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
VOLUME	Vol+	VOL	Vol+
ENTER	Enter	OK	OK
EQ	EQ	EQ SUBTITLE	Subtitle / EQ
VOLUME	Vol-	VOL	Vol-
Folder-	Folder-	CH PAGE	CH- / Page-
Folder+	Folder+	CH PAGE	CH+ / Page+

https://remotecontrols.at/en/Sony/1055575-6159-replacement-remote-control-for-Sony-RM-SCU37-A1237275A.html