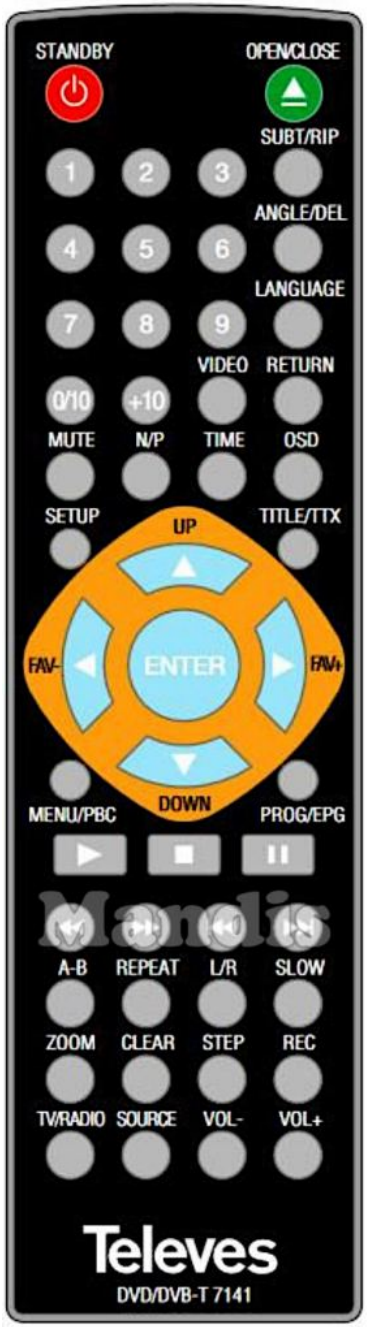

Original		Replacement	
STANDBY	Standby		Power
MUTE	Mute	DIMMER MUTE	Mute / Dimmer
▶	Play	SLOW ▶	Play / Slow
⏸	Pause	STEP - FREEZE ⏸	Pause / Step / Freeze
■	Stop	HOLD ■	Stop / Hold
REC	Rec	REC MODE	Rec / Rec Mode
◀◀	<<	TUNE- ◀◀	<< / Tune-
▶▶	>>	TUNE+ ▶▶	>> / Tune+
I<<	I<<	PRESET- I<<	I<< / Preset-
>>I	>>I	PRESET+ >>I	>>I / Preset+
LANGUAGE	Language	LANG I/II AUDIO	Audio / Lang I/II
SUBT/RIP	SUBT / RIP	EQ SUBTITLE	Subtitle / EQ
OPEN/CLOSE	Open / Close	SURROUND ⏏	Eject / Surround
ZOOM	Zoom	SIZE ZOOM	Zoom / Size
TIME	Time	TIMER SLEEP	Sleep / Timer
TV/RADIO	TV / Radio	PROGRAM TV/RADIO	TV/Radio /
SETUP	Setup	OPT-TOOLS SETUP	Setup / OPT / Tools

Original		Replacement	
TITLE/TTX	Title / TTX	GOTO TEXT	Text / Goto
SOURCE	Source	RDS AV INPUT	AV / Input / RDS
MENU/PBC	Menu / PBC	HOME MENU	Menu / Home
UP	Up	▲	Up
FAV-	Left / Fav-	◀	Left
ENTER	Enter	OK	OK
FAV+	Right / Fav+	▶	Right
CLEAR	Clear	CLEAR EXIT CANCEL	Exit / Cancel / Clear
DOWN	Down	▼	Down
RETURN	Return	RETURN BACK	Back / Return
VOL+	Vol+	+ VOL	Vol+
L/R	L/R	LIST SMART	Smart / List
VOL-	Vol-	VOL −	Vol-
OSD	OSD	MEDIA DISPLAY	Display / Media
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3

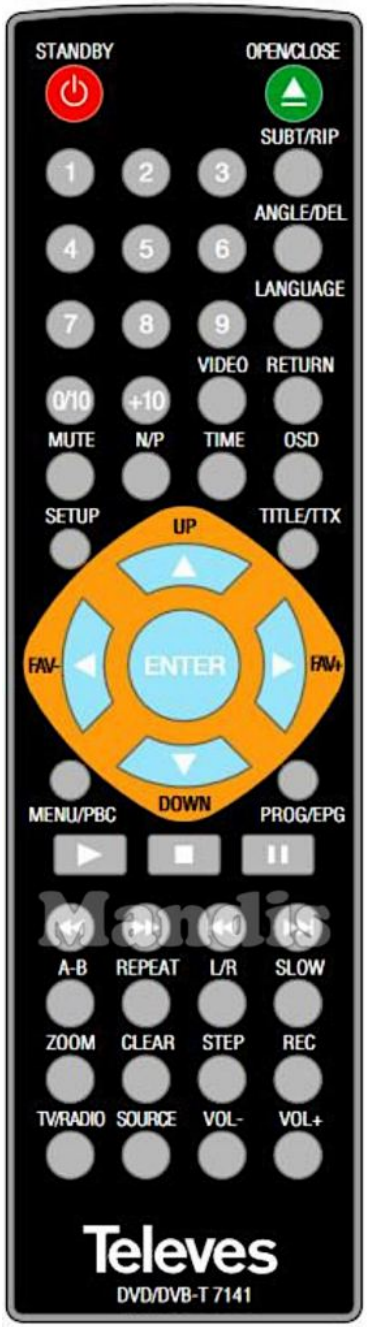

Original		Replacement		Original	Replacement
4	4	VIDEO 4	4		
5	5	TAPE 5	5		
6	6	TUNER 6	6		
7	7	AUX - HDD 7	7		
8	8	USB 8	8		
9	9	BLUETOOTH 9	9		
+10	+10	-/-- GUIDE EPG	Guide / EPG / -/--		
+10	0/10	HDMI - SAT 0	0		
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat		
A-B	A-B	YouTube REPEAT A-B	Yellow / YouTube / Repeat		
SLOW	Slow	SHIFT + SLOW ▶	Shift + Play /		
STEP	Step	SHIFT + STEP - FREEZE ⏸	Shift + Pause / Step /		
PROG/EPG	Prog / EPG	SHIFT + PROGRAM TV/RADIO	Shift + TV/Radio / Program		
ANGLE/DEL	Angle / Del	SHIFT + RETURN BACK	Shift + Back / Return		
N/P	N/P	SHIFT + MEDIA DISPLAY	Shift + Display / Media		
VIDEO	Video	SHIFT + VIDEO 4	Shift + 4		
PROG/EPG	Prog / EPG	SHIFT + -/-- GUIDE EPG	Shift + Guide / EPG / -/--		