Original	Replacement	Original	Replacement
Power	Power	7	7
Sleep/Timer	Sleep / Timer	8	8
Display	Display / Media	9	9
Play/Pause CD	Play / Slow	+10	Guide / EPG / -/--
Line	Subtitle / EQ	10/0	0
<> Tape	Back / Return	Clear	Exit / Cancel / Clear
FM/AM	TV/Radio /	Rec Menu	Rec / Rec Mode
I<</-	I<< / Preset-	PGM	Smart / List
Stop	Stop / Hold	Repeat	Green / APP / Repeat
>>I/+	>>I / Preset+	Play Mode	Eject / Surround
Menu	Menu / Home	Sound Mode	Sound / Title
1	1	Random	Blue / Prime Video / Random
2	2	Up	Up
3	3	Down	Down
4	4	Left	Left
5	5	Right	Right
6	6	Enter	OK

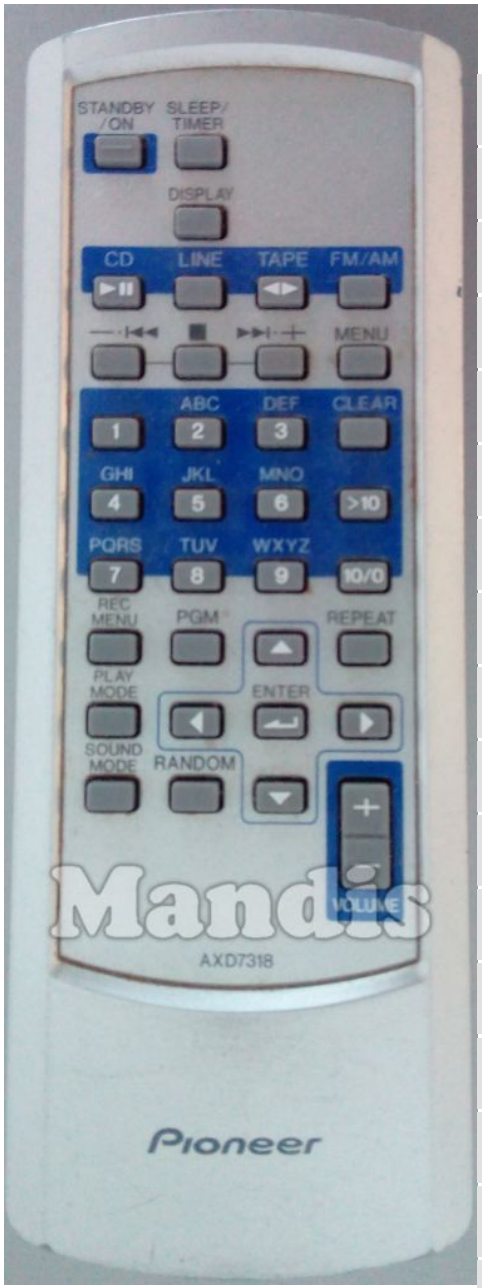

Original	Replacement	Original	Replacement
Vol +	Vol +		
Vol -	Vol -		