Mandis shop

Marantz RC-63CD

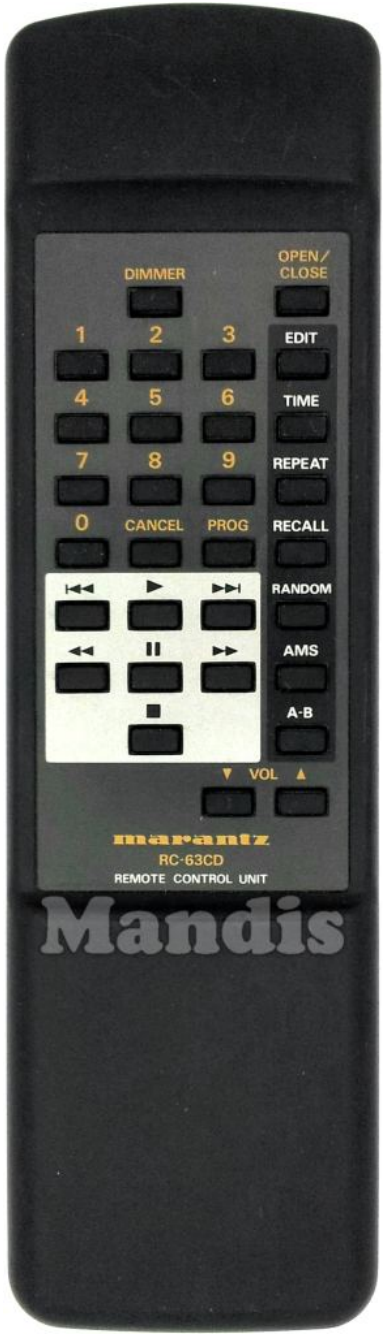

Original	Replacement	Original	Replacement
DIMMER — Dimmer	DIMMER MUTE — Mute / Dimmer	RECALL — Recall	RETURN BACK — Back / Return
OPEN/CLOSE — Open/Close	SURROUND — Eject / Surround	⏮ — I<<	PRESET- ⏮ — I<< / Preset-
1 — 1	TV 1 — 1	▶ — Play	SLOW ▶ — Play / Slow
2 — 2	DVD 2 — 2	⏭ — >>I	PRESET+ ⏭ — >>I / Preset+
3 — 3	CD-STB 3 — 3	RANDOM — Random	Prime Video RANDOM — Blue / Prime Video / Random
EDIT — Edit	MEDIA DISPLAY — Display / Media	◀◀ — <<	TUNE- ◀◀ — << / Tune-
4 — 4	VIDEO 4 — 4	⏸ — Pause	STEP-FREEZE ⏸ — Pause / Step / Freeze
5 — 5	TAPE 5 — 5	▶▶ — >>	TUNE+ ▶▶ — >> / Tune+
6 — 6	TUNER 6 — 6	AMS — AMS	LIST SMART — Smart / List
TIME — Time	TIMER SLEEP — Sleep / Timer	■ — Stop	HOLD ■ — Stop / Hold
7 — 7	AUX-HDD 7 — 7	A-B — A-B	YouTube REPEAT A-B — Yellow / YouTube / Repeat
8 — 8	USB 8 — 8	▼ VOL — Vol -	VOL — Vol -
9 — 9	BLUETOOTH 9 — 9	VOL ▲ — Vol +	VOL — Vol +
REPEAT — Repeat	APP REPEAT — Green / APP / Repeat		
0 — 0	HDMI-SAT 0 — 0		
CANCEL — Cancel	CLEAR EXIT CANCEL — Exit / Cancel / Clear		
PROG — Prog	PROGRAM TV/RADIO — TV/Radio / Program		

https://remotecontrols.com/Marantz/1054628-replacement-remote-control-for-Marantz-RC63CD.htm