Mandis shop

Yamaha RAS21

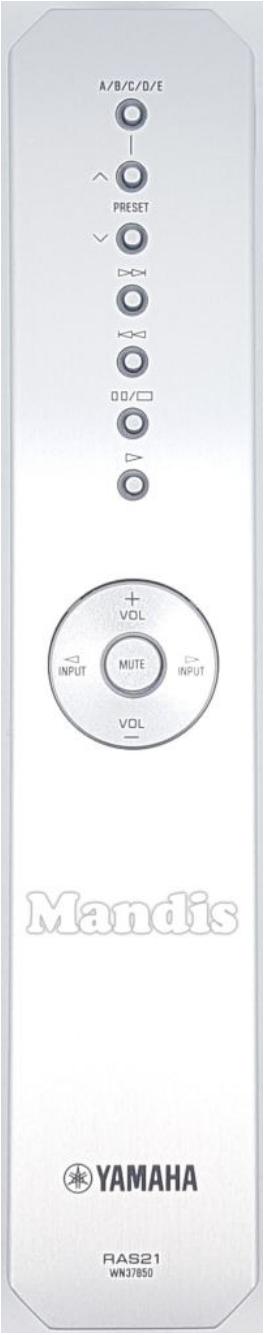

Original	Replacement	Original	Replacement
A/B/C/D/E	Smart		
Preset Up	Ch +		
Preset Down	Ch -		
>>I	>>I		
I <<	I <<		
Stop	Stop		
Pause	Pause		
Play	Play		
Vol +	Vol +		
Vol -	Vol -		
Mute	Mute		
Input >	Right		
< Input	Left		

https://remotes.com/Yamaha/10253628-replacement-remote-control-for-Yamaha-RAS21-WN37850.htm